

 
Software Guide

for Macintosh

- ImageBrowser
- CameraWindow
- Map Utility
- Movie Uploader for YouTube
- PhotoStitch

Special Features

Transfer Images and Movies

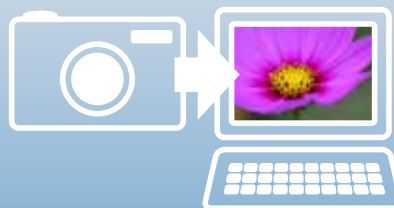


Insert Text




Save Still Images From Movies



 Edit Movies

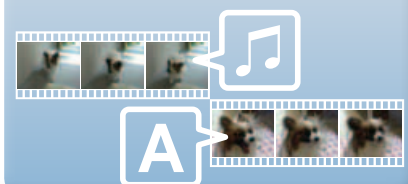

Print Images

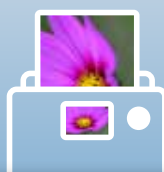 

Attach Images to Email



Plus many other useful features



About this Manual

Notation Conventions

The contents of this manual are classified according to the following symbols.

! IMPORTANT

- The “Important” sections contain operating precautions or important topics. Ensure that you read them.

💡 HINT

- The “Hint” sections contain procedural suggestions and tips for your convenience. Read them as necessary.

 
Operating Environment

- This manual uses Mac OS X v10.5 screen shots and procedures in the explanations. The screen shots and procedures may appear slightly different if you are using another version of Mac OS.
- The displayed screens and procedures may also differ slightly from the examples depending upon the camera or printer model in use.
- The explanations in this guide are based on the premise that a Canon compact digital camera will be used with the software.
- Some functions may not be available depending on the camera model.

Word Searches

This document is provided as an Adobe Reader document. Use Adobe Reader’s Search functions to find specific words or phrases that you recall but cannot find. To access this function, in Adobe Reader click the [Edit] menu and select the [Search] option.

If you are using Adobe Reader 8 or later, you can also perform searches with the [Find] function right on the toolbar.

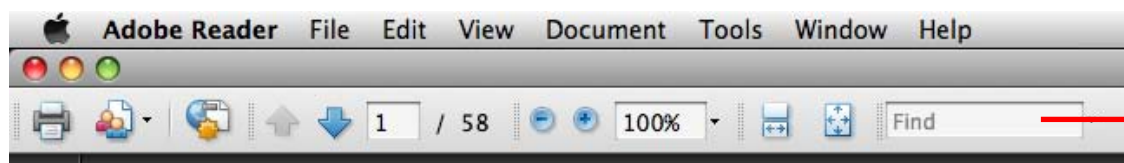

Input search text here

Precautions for Connecting the Camera to the Computer

- When connecting the camera to the computer with an interface cable, make sure to connect the cable directly to the computer's USB port. The connection may not operate correctly if you attach the camera to the computer via a USB hub.
- The connection may not operate correctly if you are using other USB devices, excluding USB mice or keyboards, at the same time as the camera. If this occurs, disconnect the other devices from the computer and try reconnecting the camera.
- Do not connect two or more cameras at the same time to the same computer. The connections may not operate correctly.
- Do not allow the computer to go into sleep (standby) mode while a camera is connected via the USB interface cable. If this does happen, do not disconnect the interface cable. Try to awaken the computer with the camera in the connected state. Some computers will not awaken properly if you disconnect the camera while they are in sleep (standby) mode. Please refer to your computer manual for instructions regarding the sleep (standby) mode.
- Do not disconnect the camera from the computer if CameraWindow is displayed on the screen.

IMPORTANT

- **You are recommended to use an AC adapter (sold separately) when connecting to a computer. Ensure that you use fully charged batteries if you cannot use an AC adapter.**
- **See the *Camera User Guide* for procedures on connecting the camera to the computer.**

Table of Contents

About this Manual	2
Precautions for Connecting the Camera to the Computer	3
Things to Remember	6
CameraWindow and ImageBrowser	6
CameraWindow and ImageBrowser	6
ImageBrowser's Browser Window	7
How to Display Browser Window	7
Names of the Browser Window Parts	7
How to Perform Tasks	8
Selecting and Using Functions	8
Mastering the Basics	9
Transferring Images	9
Transferring Images by Connecting the Camera to a Computer	9
Printing	12
Printing a Single Image on a Single Page	12
Index Print	14
How to Use CameraWindow	16
First Menu Screen to Open	16
Image Transfer Screen	17
Organize Images Screen	18
How to Use ImageBrowser's Browser Window	19
Browser Window	19
Display Modes	20
Display Control Panel	20
Browser Area Tasks	21
File Information Window	22
Viewer (View Image) Window	23
More Advanced Techniques	24
Editing Images	24
Trimming – Cropping a Portion of an Image	24
Color/Brightness Adjustment	24
Red Eye Correction	25
Inserting Text	25
Correcting Levels	26
Correcting Tone Curves	26
Adjusting Sharpness – Emphasizing Outlines	27
Auto Adjustment	27
Using Other Editing Software	28
Attaching Sounds	29
Creating Panoramic Images – PhotoStitch	30
Editing Movies	31
Converting RAW Images – Digital Photo Professional	32

Exporting 34

- Changing Image (Stills) Sizes and Types 34
- Exporting Shooting Information 34
- Creating Computer Screen Saver Images 35
- Creating Computer Wallpaper Images 35
- Extracting Stills from Movies 36

GPS 37

- Using GPS Information – Map Utility 37

Uploading Movies to YouTube 39

- Uploading to YouTube – Movie Uploader for YouTube 39

Email 40

- Attaching Images to Email 40

Slide Shows 41

- Viewing Images in Slide Shows 41

Image Management 42

- Changing File Names in Batches 42
- Sorting Images into Folders by Shooting Date 42
- Sorting Images into Ratings Folders 43

Configuring Image Information Settings 44

- Setting Ratings 44
- Inserting Comments 44
- Assigning Keywords 45

Searching, Filtering and Sorting Images 46

- Searching Images 46
- Filtering Images 47
- Sorting Images 47

Comparing Images 48

- Comparing Multiple Images 48

My Camera Settings 49

- Changing the Shutter Sound and Start-Up Image 49

Transferring Images 51

- Transferring Images to a Camera 51

CANON iMAGE GATEWAY 52

- About CANON iMAGE GATEWAY (for U.S.A. customers only) 52
- Registering 52
- Available Services 53

Preference Settings 54

- Customizing ImageBrowser 54

Appendices 55

- List of Available Functions 55
- Supported Image Types 57
- Uninstalling the Software 58
- Memory Card Folder Structure 59
- Troubleshooting 60

CameraWindow and ImageBrowser

CameraWindow and ImageBrowser

The following two windows are the main ones used for CameraWindow and ImageBrowser procedures.



CameraWindow

This is software that communicates with the camera.

You can use it to transfer images to and from the camera, organize images on the camera, and upload movies on the camera to web services.

The menu screen at the right will appear when the camera is connected to a computer.



After the images are transferred from the camera, the screen changes when CameraWindow is closed.



ImageBrowser

This is software that manages images transferred to a computer.

You can use it to view, edit and print images on a computer. If you close CameraWindow after transferring images, the window at the right will appear.

You can also open the window by clicking the [ImageBrowser] icon in the dock.



HINT

Use the Help Function

The (Help) button or Help menu is available in most CameraWindow and ImageBrowser windows. It is there for when you are unsure how to proceed.

ImageBrowser's Browser Window

How to Display Browser Window

ImageBrowser's Browser Window will appear after the camera images are transferred and CameraWindow closes. You can also display it by clicking the ImageBrowser icon in the Dock (the bar at the bottom of the desktop).

- If the ImageBrowser icon is not displayed in the Dock, double-click the [Applications] folder, followed by the [Canon Utilities] folder, [ImageBrowser] folder and the [ImageBrowser] icon.



Names of the Browser Window Parts

Menu Bar: The top bar containing the Apple logo and menu items: ImageBrowser, File, Edit, View, Internet, Window, Help.

Display Modes: Buttons for 'Preview Mode' and 'Last Mode' located above the main image display area.

Browser Area: The central area displaying a large image of a pink flower. Icons around the image indicate properties like 'RAW', 'AEB', 'GPS', etc.

Last Acquired Images: A sidebar on the left showing a list of folders and dates, such as '2010_08_11' and 'My Category'.

Folder Area: A sidebar on the left showing a tree view of folders like 'Movies' and 'Pictures' with sub-folders for dates.

Control Panel: A horizontal bar at the bottom containing icons for 'Canon Camera', 'View Image', 'SlideShow', 'Print & Share', and 'Send to Trash'.

Display Control Panel: A horizontal bar at the bottom containing icons for 'View', 'Filter Tool', 'Zoom', 'Searching Images', and other display controls.

Properties Icon (Displays Image Properties)



- | | | | |
|--|--|--|--|
| | : Image recorded using the camera's Stitch Assist mode | | : Image with sound memo attached |
| | : RAW image | | : Protected image |
| | : Movie | | : Image recorded using the camera's AEB function |
| | : Super Slow Motion Movie | | : Rotated image (rotated in display only) |
| | : Movies recorded with Movie Digest mode | | : iFrame Movie |
| | | | : Image taken with camera's GPS function |

How to Perform Tasks


Selecting and Using Functions

Many ImageBrowser functions can be accessed by selecting them from the Control Panel and following the instructions in the guidance section of the new window. For further details on the functions, refer to ["List of Available Functions"](#) in the appendix.

  1 Select a function from the Control Panel or a menu.

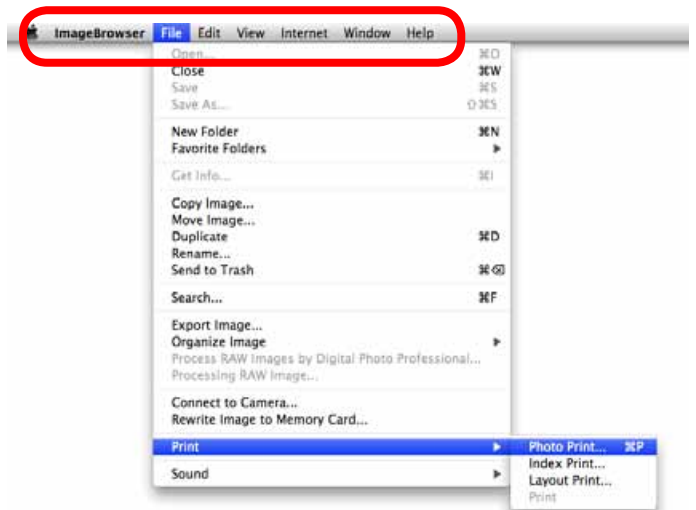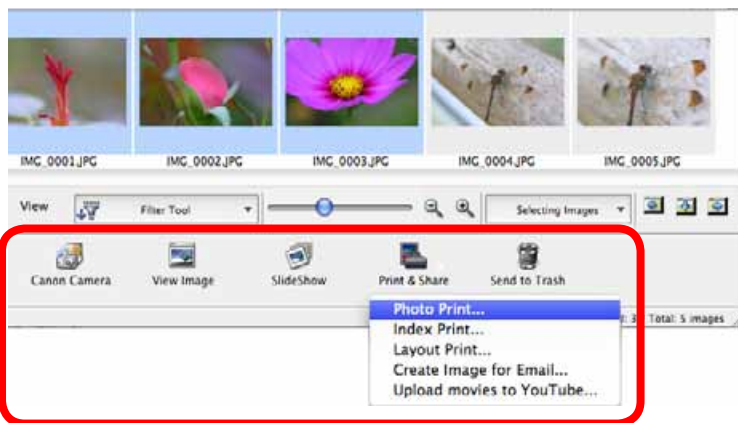

 2 Follow the instructions to perform the task.

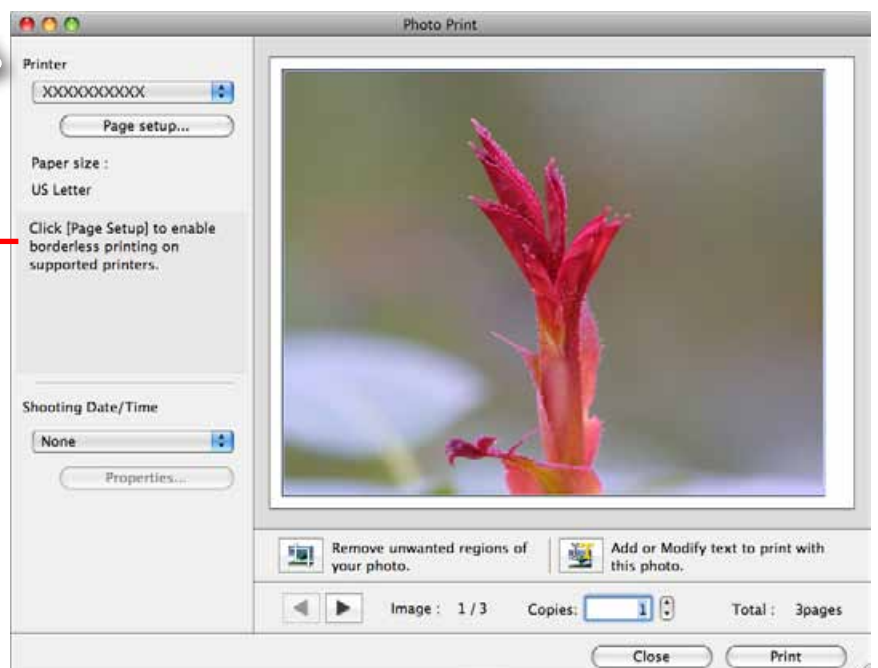

Transferring Images

Transferring Images by Connecting the Camera to a Computer

 
Transfer the camera images to the computer.



! IMPORTANT

- The instructions in this software manual assume that you have correctly installed the software. See the *Camera User Guide* for software installation procedures.
- For details on how to connect the camera to a computer, refer to the *Camera User Guide*. Please also refer to [“Precautions for Connecting the Camera to the Computer”](#).
- If CameraWindow fails to open when you connect the camera, click the [CameraWindow] icon in the Dock (the bar at the bottom of the desktop).

1 Connect the camera to the computer with the supplied interface cable.

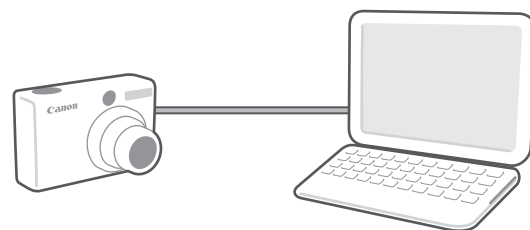


2 Turn on the camera power, set it to playback mode and prepare it to communicate with the computer.

3 Click [Import Images from Camera] and then click [Import Untransferred Images].

Only images that have not yet been transferred will start to transfer.


If you use the logger function on a camera equipped with an internal GPS function, the GPS log files will also transfer.

 
CameraWindow (Menu Screen)

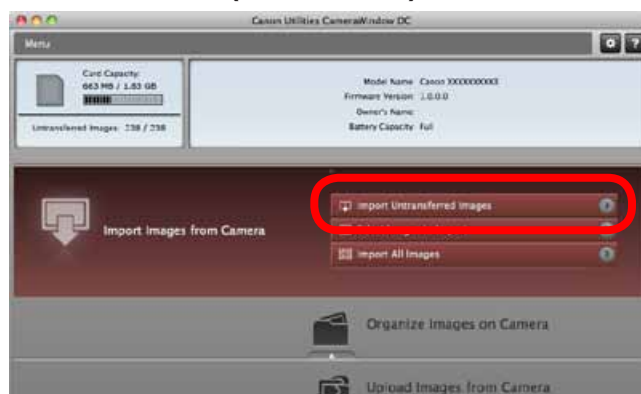

After you click [OK] in the dialog that indicates the transfer is complete and close the CameraWindow screen, the transferred images will display in the Browser Window.

You can select the newly transferred images by their shooting dates or My Category (select models only) classification.

 
 : Folders containing newly acquired images

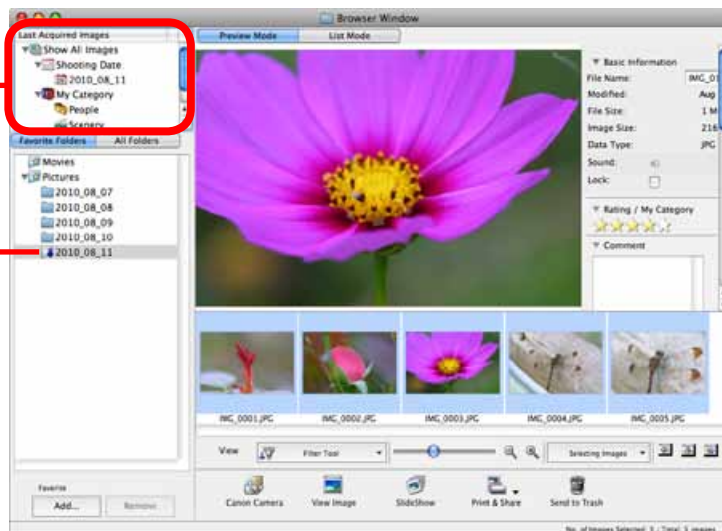


- Images from memory cards with large numbers of images (more than 1,000) may not transfer correctly. If this happens, please use a memory card reader to transfer. For details on transferring images from a memory card reader, refer to ["Transferring Images Using a Memory Card Reader"](#).
- Movie files take time to transfer since the files are large.

HINT


Changing the Transfer Destination Folder


The default settings save transferred images into the [Pictures] folder. To change the destination folder, click the  button shown on the right in Step 3 as described on the previous page, then click the [Import] button. In [Folder Settings], click [Browse] to complete settings in the screen currently displayed.

 The transfer destination folder for GPS log files cannot be changed.

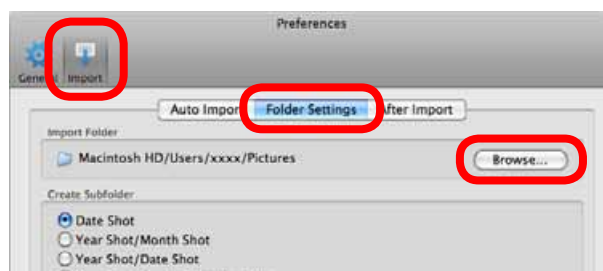

 
Changing the software that displays after images have been transferred

 
You can choose the software that displays after images have been transferred. Click  in the upper right corner of CameraWindow, then click [Import] in the screen that appears and choose the [After Import] tab. After making your settings, press [OK] and close the [Preferences] screen.

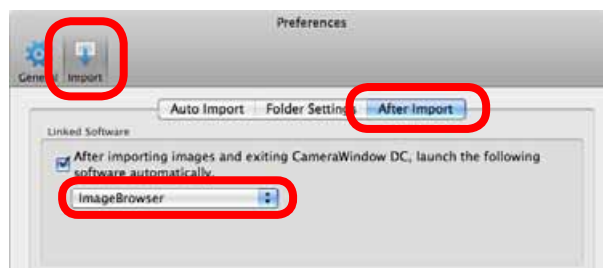

HINT

Select Images to Import

 To transfer only a selection of images from the camera, click [Import Images from Camera] in CameraWindow (menu screen), [Select Images to Import], then select images in the image transfer screen, and click the  (Import) button. For details, refer to "Image Transfer Screen".

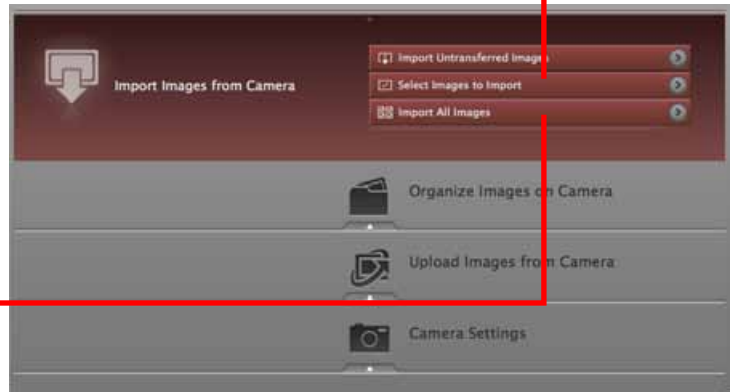


Import All Images

To transfer all images on the camera, click [Import Images from Camera] in CameraWindow (menu screen) then, [Import All Images].

Automatically Transferring Images on CameraWindow Start-Up

To automatically transfer images when CameraWindow starts up, click the button shown on the right in CameraWindow (menu screen), then click the [Import] button, and the [Auto Import] tab. Add a checkmark to [Start importing images automatically when this software is launched.].

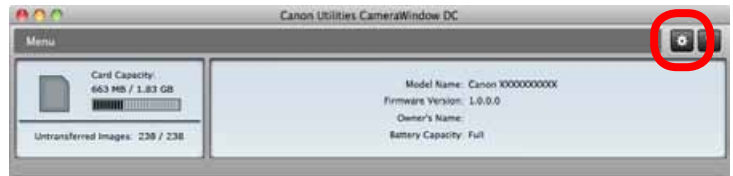 

Transferring Images Using a Memory Card Reader

ImageBrowser will start when you insert a memory card into the memory card reader, and display the following window. Use this window to perform the transferring procedures.



Transfers all images.

Allows you to select and transfer images.

 
Prints images.

Configures the transfer folder and other settings.

Printing

Printing a Single Image on a Single Page

Prints one image per page.

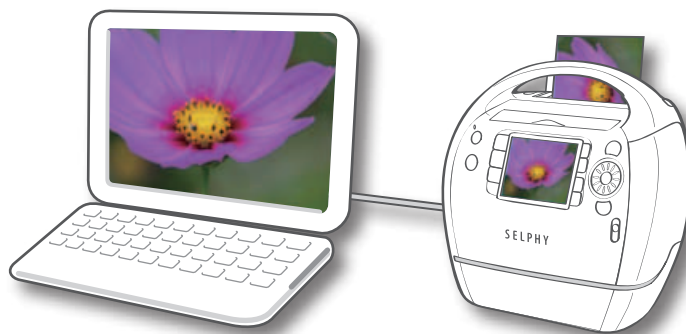


HINT


Printing Movies

Movies cannot be printed, but you can extract still images from movies, and print them after they have been saved. For details on how to save still images from movies, refer to [“Extracting Stills from Movies”](#).

 1 Select images for printing.

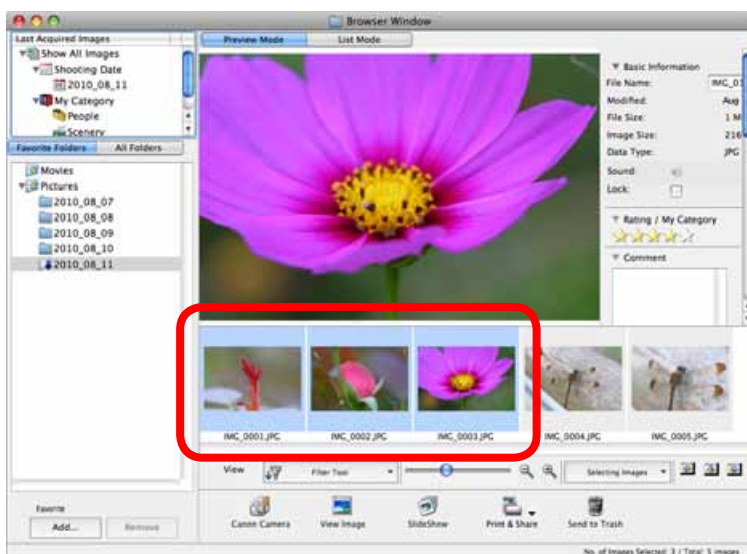


 2 Click [Print & Share], and [Photo Print].

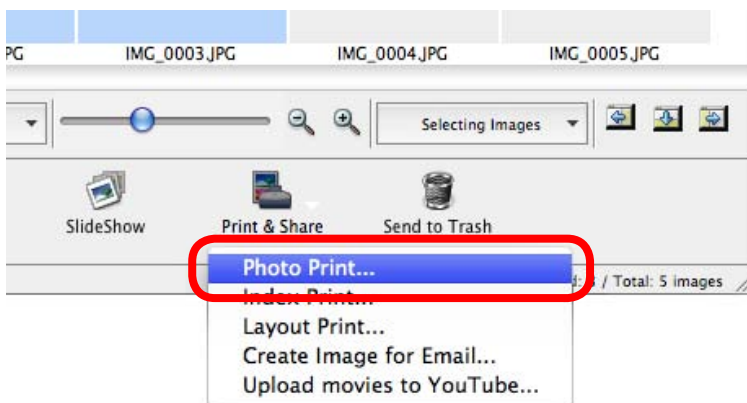

3 Set the categories as desired.

 Sets the printer, paper size and borderless printing settings.

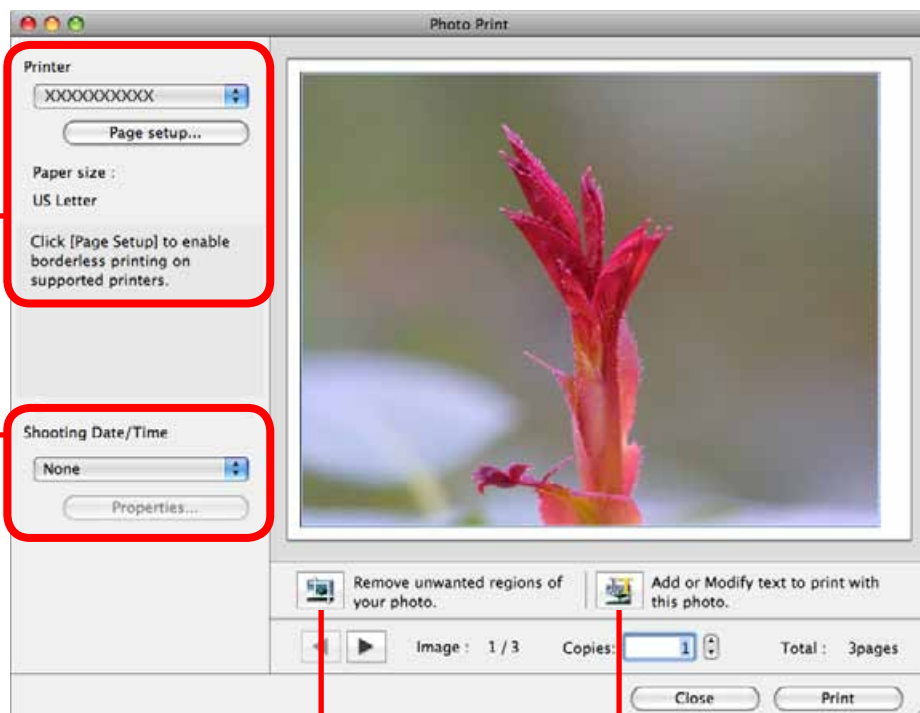

Sets the shooting date/time imprint settings.

Click here to crop and print a portion of an image.

Click here to insert text onto an image and print.

4 Click [Print].

Print window will display.

5 Click [Print].

Printing will start.

HINT

Laying Out and Printing

 
You can also select multiple images, add captions and print freely composed layouts on a single page. Click [Print & Share] in the Control Panel and select [Layout Print]. The shooting date will automatically appear when you perform a layout print if you click the [ImageBrowser] menu, followed by [Preferences] and [Layout Print], and place a check mark beside [Shooting Date].

Index Print


Prints an index of the images.



1 Select images for printing.

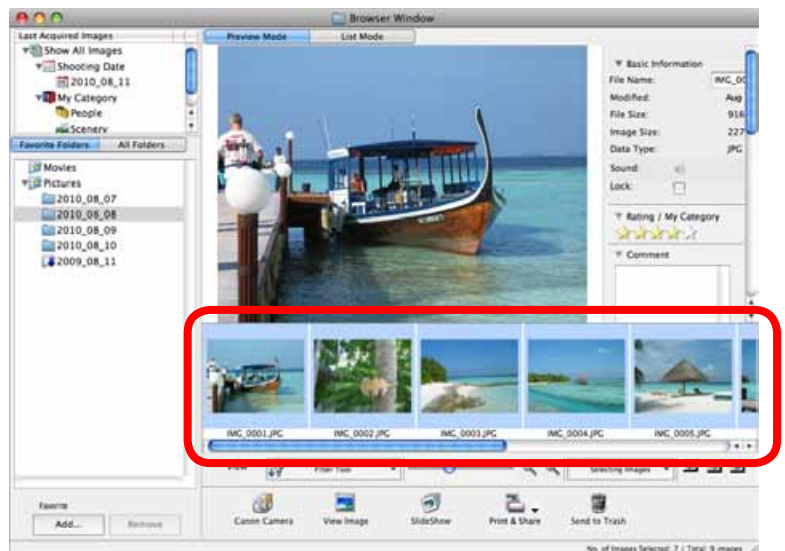

 2 Click [Print & Share], and [Index Print].

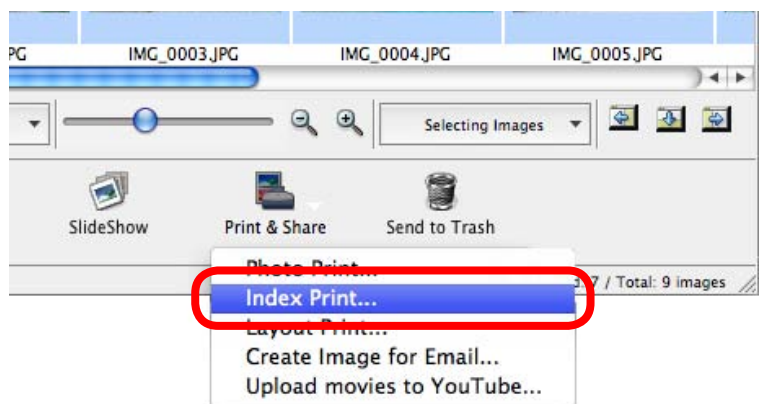


3 Set the categories as desired.

Sets the printer, paper size and number of print copies settings.

Sets the number of rows or columns.

Configures the printing of the shooting information, comments, headers, footers or page numbers.

 Select an image to rotate or trim.

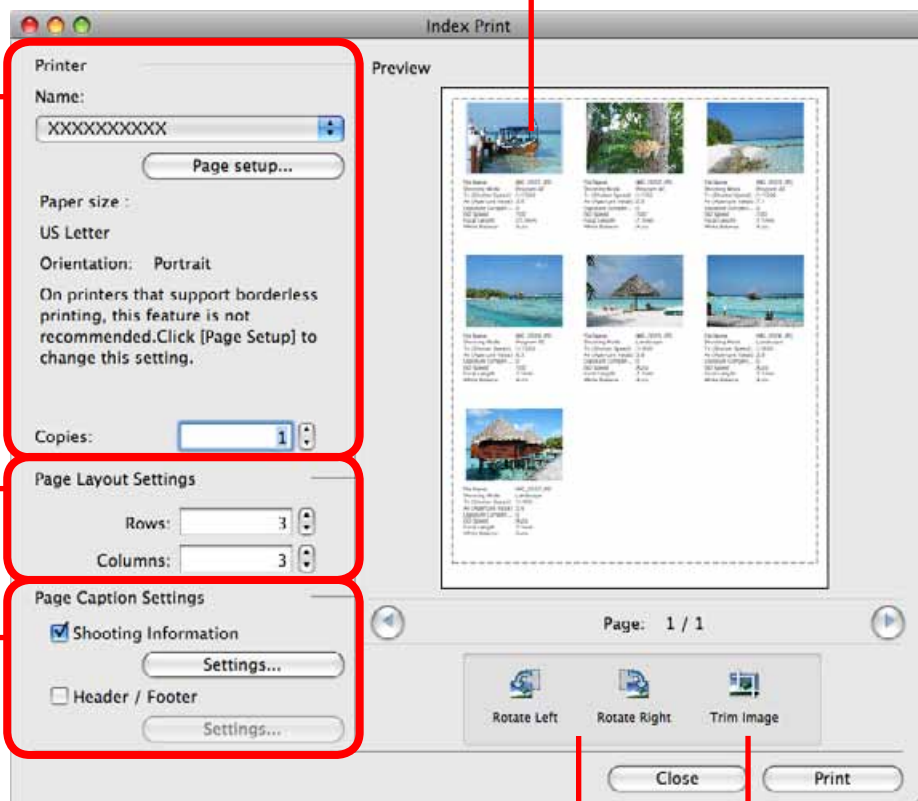

Rotates selected images.

Click here to crop a portion of the selected image and print it.

4 Click [Print].
Print window will display.

5 Click [Print].
Printing will start.

 
How to Use CameraWindow

First Menu Screen to Open

This screen appears when the camera is connected to your computer. Click each button to display the available options.

Displays in-camera memory card information.

Displays camera information.

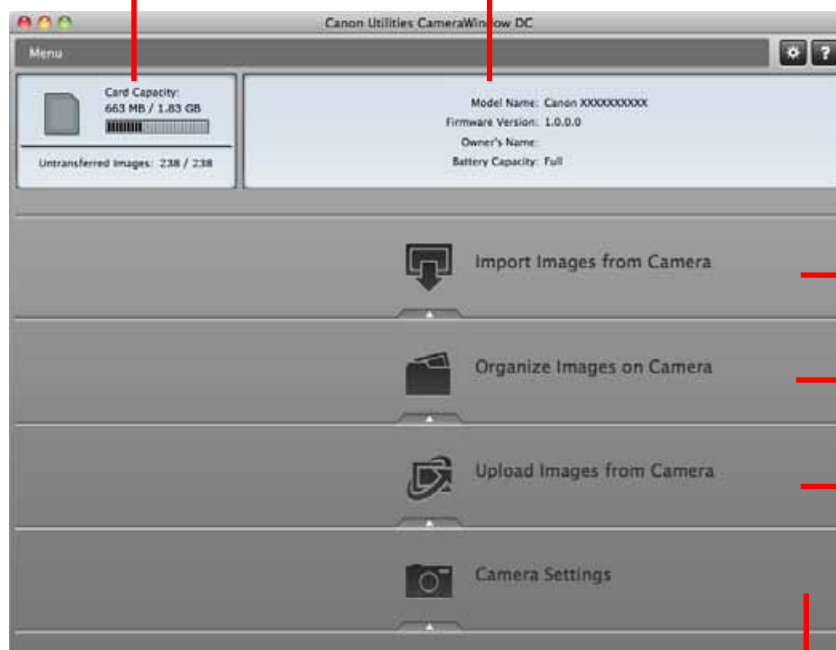

Starts operations for transferring images from the camera to your computer.

Starts operations for protecting, rotating, and deleting images on the camera. Also transfers images from your computer to the camera.

Starts operations for uploading movies on the camera to web services.

Starts operations for setting the camera start-up screen, start-up sound, and various camera sounds. For details, refer to ["My Camera Settings"](#) in ["More Advanced Techniques"](#). This menu may not appear depending on your camera model.

HINT

Customizing CameraWindow Functions



If you click the  button as shown in the upper right of the screen, you can customize various functions to make CameraWindow easier to use. You can change the automatic transfer settings, the start-up screen that appears when starting CameraWindow, and the transfer destination folder.


Image Transfer Screen

This screen appears when you click [Import Images from Camera] on the Menu screen, then click [Select Images to Import]. Select the image you want to transfer and click the  button to transfer the image to your computer.

Viewer Window (Thumbnail Display)

Closes CameraWindow.

 
Returns to the Menu screen.

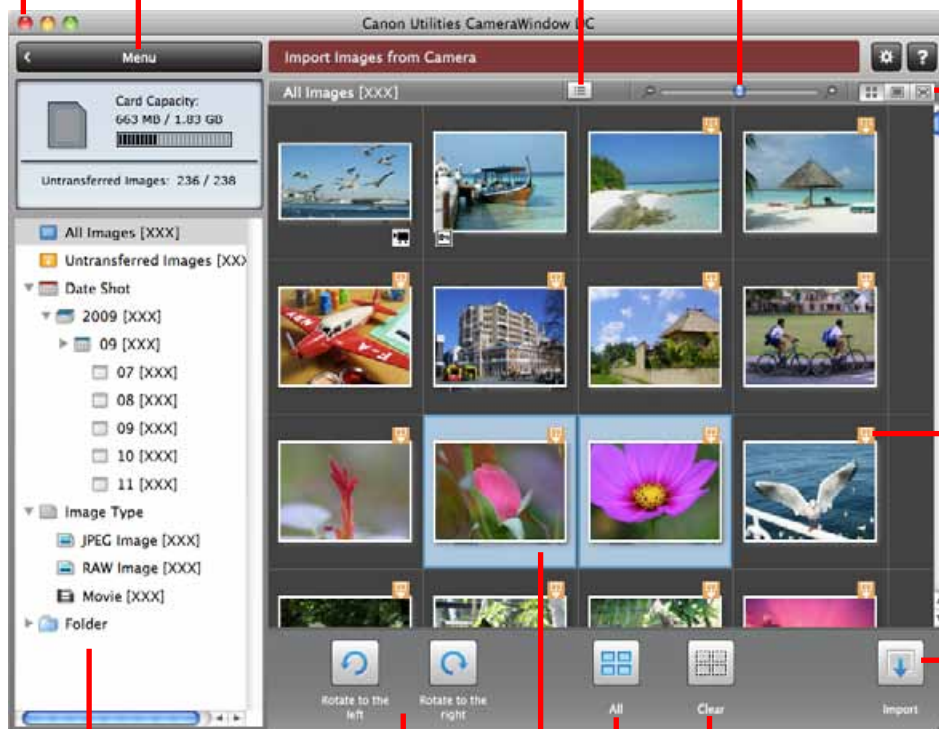



Images on the camera that match the selected filter display in the area to the right.

  Rotates chosen images 90° to the left or right.

The background of chosen images turns blue.

 Turns the shooting date and folder name below the thumbnails on and off (when in thumbnail display).

 Changes thumbnail size (when in thumbnail display).


 Switches between window display modes.


 Thumbnail display

 Preview display

 Full screen display

Double-clicking an image switches to preview display when a single image is selected.

 This mark appears on images that have not yet been transferred.

 Transfers the image chosen in Viewer Window to your computer.

 Cancels image selection.

 Selects all images.

IMPORTANT

- The functions (buttons) that display will differ depending on the camera model.

 
Organize Images Screen

This screen appears when you click [Organize Images on Camera] on the Menu screen, then click [Organize Images]. Clicking a folder on the left will display all images within the folder as thumbnails (small images) on the right of the screen.

Viewer Window (Thumbnail Display)

Closes CameraWindow.

Returns to the Menu screen.

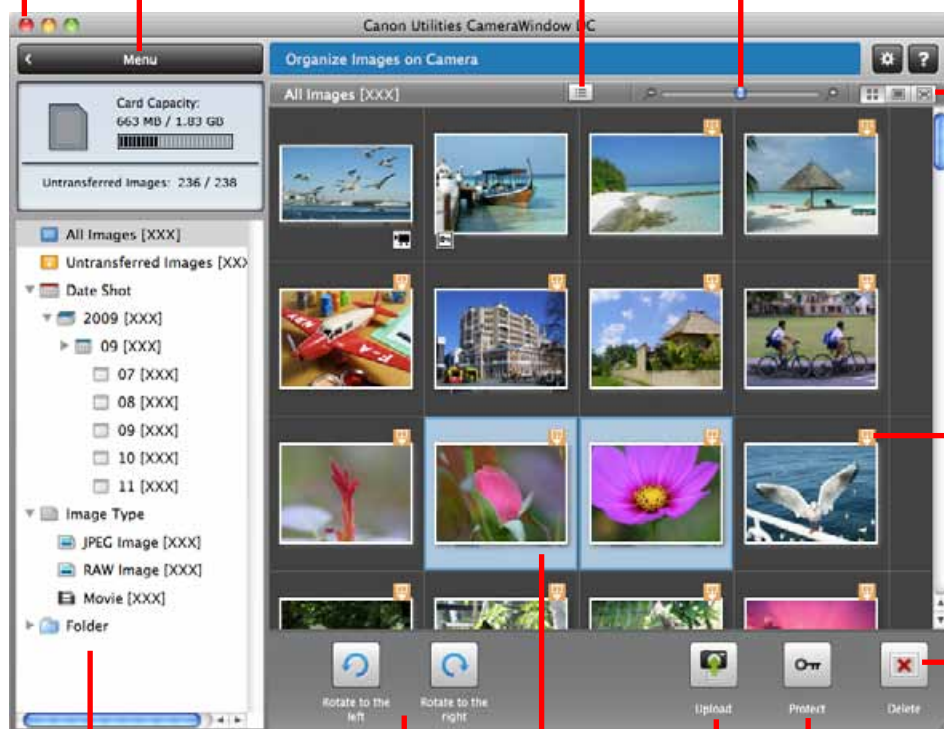

Images on the camera that match the selected filter display in the area to the right.

Rotates chosen images 90° to the left or right.

Turns the shooting date and folder name below the thumbnails on and off (when in thumbnail display).

Changes thumbnail size (when in thumbnail display).

Switches between window display modes.

 Thumbnail display


 Preview display


 Full screen display

Double-clicking an image switches to preview display when a single image is selected.

This mark appears on images that have not yet been transferred.


 Deletes the image chosen in Viewer Window.

 Protects/cancels protection for the image chosen in Viewer Window.

 Transfers images on your computer to the camera.

The background of chosen images turns blue.

! IMPORTANT

- The functions (buttons) that display will differ depending on the camera model.
- Clicking the  (Delete) button will delete the image from the camera. Exercise adequate caution, as you cannot retrieve the deleted images.

How to Use ImageBrowser's Browser Window

Browser Window

This is the main window for performing tasks in ImageBrowser.

Last Acquired Images

You can check images by shooting date or My Category.


Display Mode

Selects a display mode for the Browser Area.

Image Information Panel

When in Preview Mode: Displays information about the selected image.

 When in List Mode: Displays image information if you click the [File] menu and select [Get Info].

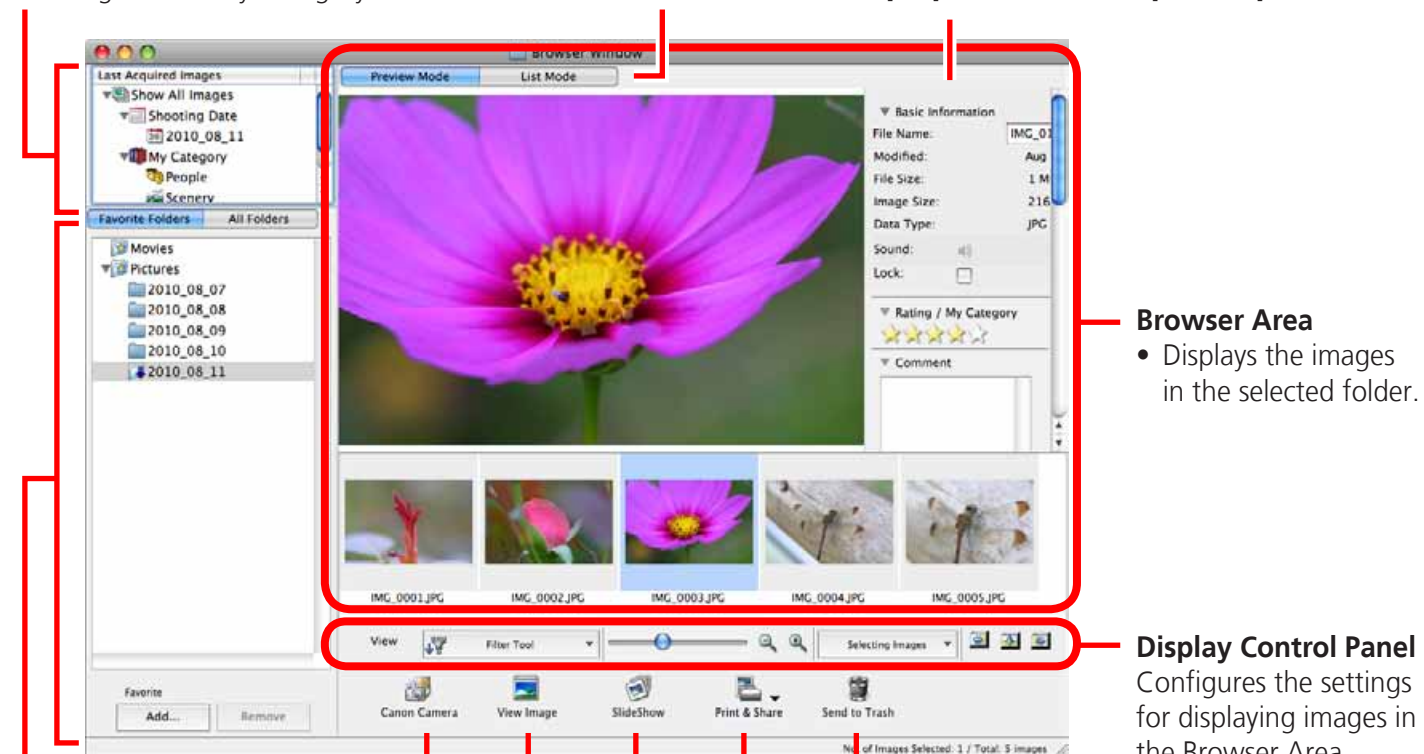

Browser Area

- Displays the images in the selected folder.

Display Control Panel

Configures the settings for displaying images in the Browser Area.

Canon Camera

Displays CameraWindow.

View Image

Displays the selected image in the Viewer Window.

Slide Show

Displays the selected images in succession in the window.

Send to Trash

Deletes selected images or folders.

- Deleted images are placed in the Trash.
- If you mistakenly send an image to the Trash, click the [Trash] icon in the Dock and restore the image to its original folder in the Finder.

Print & Share

Prints the selected image(s), creates an image attachment for email, or uploads movies to YouTube.

Folder Area

Selects a folder to display.

- You can register folders you use often as Favorite Folders (📁). Register by clicking [Add]. To delete a folder in the Favorite Folders area, select a folder and click the [Remove] button.

Rotate Image

- To rotate images, click the [Edit] menu and select [Rotate Image].
- To rotate the original image in the displayed direction, click the [Edit] menu and select [Rotate According to Rotation Information].

Display Modes

Select a browser area display mode to fit your purposes.



Preview Mode: allows the image information to be read while viewing the image.



List Mode: allows thumbnails to be viewed at a size suited for easy viewing.

Display Control Panel

This panel adjusts the display settings for the Browser Area.

Display Size

Changes the size of the thumbnail in the Browser Area.

Selection Menu

Click this to select/deselect all images in the Browser Area.



 
Filter Tool Menu

Displays only images that correspond to specific conditions.

Hide Buttons

Left: Hides the Folder Area and the Last Acquired Images.
 Middle: Hides the control panel.
 Right: Hides the Show Shooting Information panel in the [Preview] display mode.

Browser Area Tasks

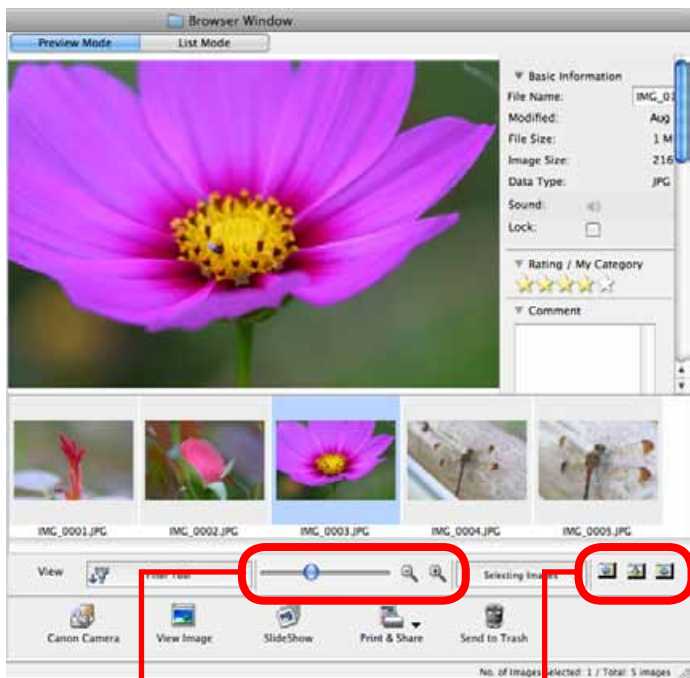

Change the Display Size
You can change the size of the thumbnails.

Show Window
You can switch between showing/hiding the Folder Area, Control Panel and Information Panel.

Functions Used in the Browser Area


Create New Folder

To create a new folder in the Browser Area, click the [File] menu and select [New Folder].

Select Images

Clicking an image in the Browser Area selects that image. To select multiple images, hold down the [shift] key or [⌘] (Command) key while clicking images, or hold down the [option] and [shift] key together and click a starting and ending image to select a range of adjacent images.

Display Images

Double-clicking an image in the Browser Area (or selecting the image and clicking ) displays it in the Viewer Window.

Move, Copy Images

To move an image between folders, drag it over the destination folder and release the mouse button. To copy an image, hold the [option] key while releasing the mouse button as above.

HINT

Right-Click Context Menus

Right-clicking (or [Control] key and clicking) over a window or image displays contextual menus. These menus contain the functions available in the current context as well as other convenient functions. Use the context menus to increase your efficiency.

File Information Window

 
The File Information Window displays when you select an image in the Browser Area, select [List Mode], and then click the [File] menu and select [Get Info].

File Name

You can change file names.

Switches between showing and hiding detailed information.

Switches between showing and hiding detailed information for the category.

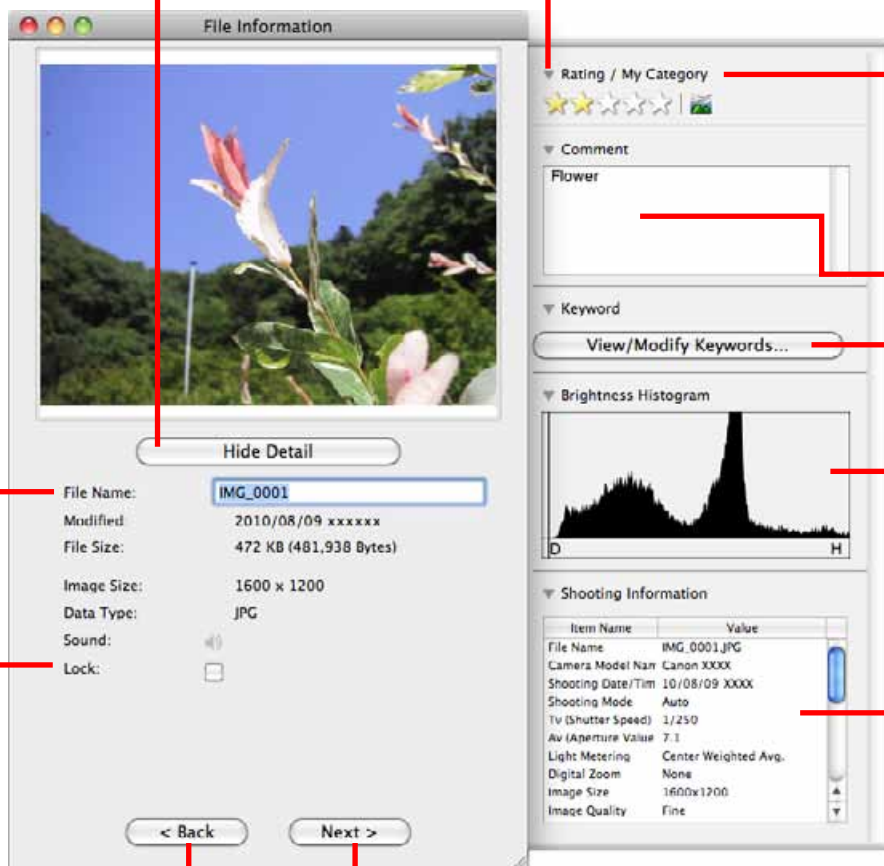

Rating / My Category

Sets the rating for an image. An icon will display if a My Category is set (certain models only).

Comment

You can type a comment here.

Keyword

Sets the keywords used in searches.

Brightness Histogram

A graph of the highlights and shadows distribution in an image.

Shooting Information

Displays detailed information, such as the shutter speed and exposure compensation setting. The camera model will determine what information is displayed.

Image Selector Buttons

When multiple images are selected, you can switch between images that display information in the File Information Window.

Lock

Prevents an image from being overwritten or deleted.

Viewer (View Image) Window

Double-clicking a thumbnail image in the Browser Window displays it in this window.

Shooting information

Change the display magnification. Zooming in displays the Navigator window to show the relative position on the image.

Save an image.

Edit an image.

Display multiple images side by side.

Set the Rating.

Display the shooting information. You can configure the information display by clicking the [ImageBrowser] menu and selecting [Preferences].

Display at full screen size.

- The following window will appear when a movie is displayed.

You can control movie playback and sound volume.

You can extract stills from movies.

You can cut portions at either end of a movie clip.

- A bar for changing the playback speed, and **1x** (real-time playback) will appear when a Super Slow Motion Movie is displayed. If you click **1x**, the movie will play back at the actual speed it was shot at.

 
Editing Images

! IMPORTANT

- The original image will be overwritten after an image is edited unless the file name is changed before saving it. To preserve the original image intact, change the file name when saving the edited image.
- This section introduces the procedures for starting from the [Edit] button in the Viewer Window, but you can also start the same process by clicking the [Edit] menu and selecting [Edit still image].

Trimming – Cropping a Portion of an Image

Use this to delete unnecessary portions of the image and leave only the necessary portions.

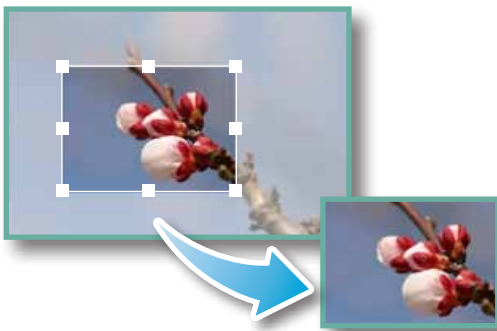


Procedures

- 1 Double-click an image.
- 2  [Edit] and [Trim].


- You can also input values or an aspect ratio to specify the trim area.
- Movies and RAW images cannot be edited.

Color/Brightness Adjustment

 Adjusts the images' RGB values (red, green, blue) and the saturation and brightness.

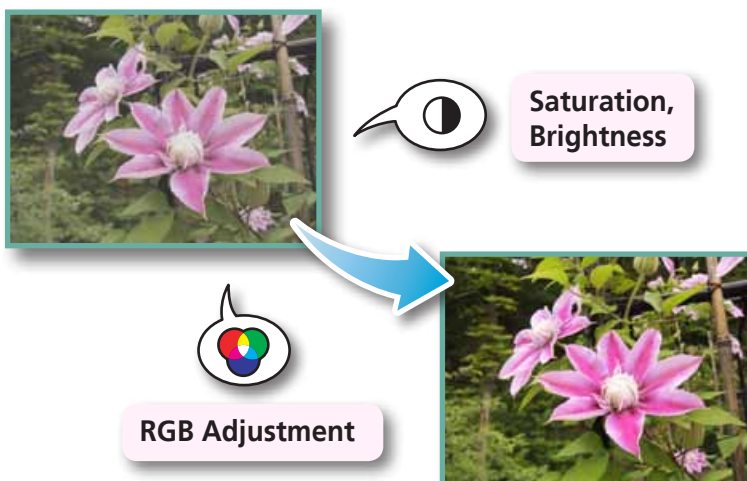


Procedures

- 1 Double-click an image.
- 2  [Edit] and [Color/Brightness Adjustment].

- Movies and RAW images cannot be edited.

Red Eye Correction

 Restores eye appearance to the original color when light reflected from the flash makes them appear red.

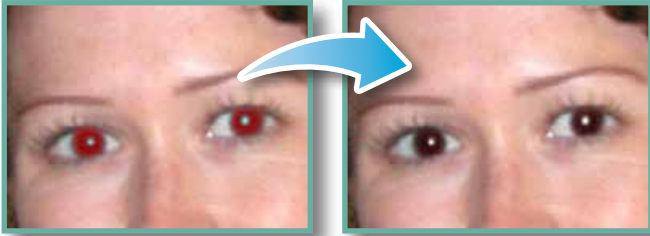

- Click [Start] when Auto Mode is selected.
- Switch to Manual Mode if Auto Mode cannot correct the image, and select the location of the eye to correct.

Procedures

- 1 Double-click an image.
- 2  [Edit] and [Red Eye Correction].


- Movies and RAW images cannot be edited.
- If a message appears that recommends installation of additional software when using Mac OS X v10.6, follow the message to install the software.

Inserting Text

Use this to insert text onto the image.



 
Procedures

- 1 Double-click an image.
- 2  [Edit] and [Insert Text].

- Placing a checkmark in the [Antialias] box causes the text edges to blend in with the underlying image.
- Movies and RAW images cannot be edited.

Correcting Levels

You can adjust the highlights (brightest portions), shadows (darkest portions) and mid-tone levels of an image while viewing its histogram.

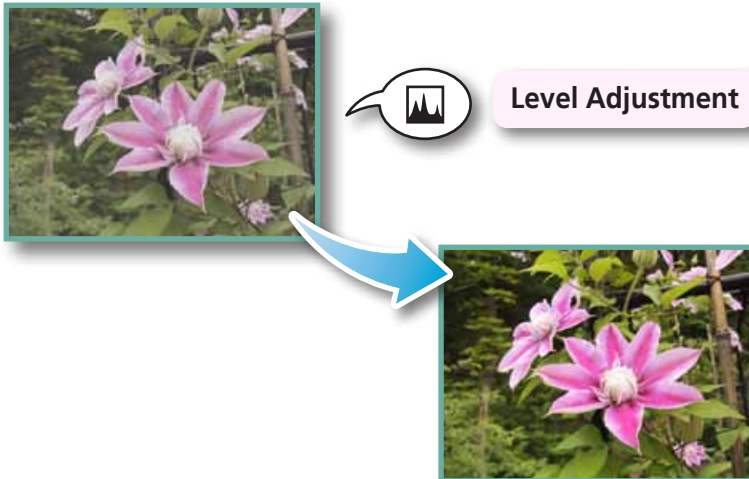


Procedures

- 1 Double-click an image.
- 2  [Edit] and [Level Adjustment].


- Movies and RAW images cannot be edited.

Correcting Tone Curves

 You can adjust the color balance and brightness of an image using its tone curve (input/output conversion graph of image brightness).

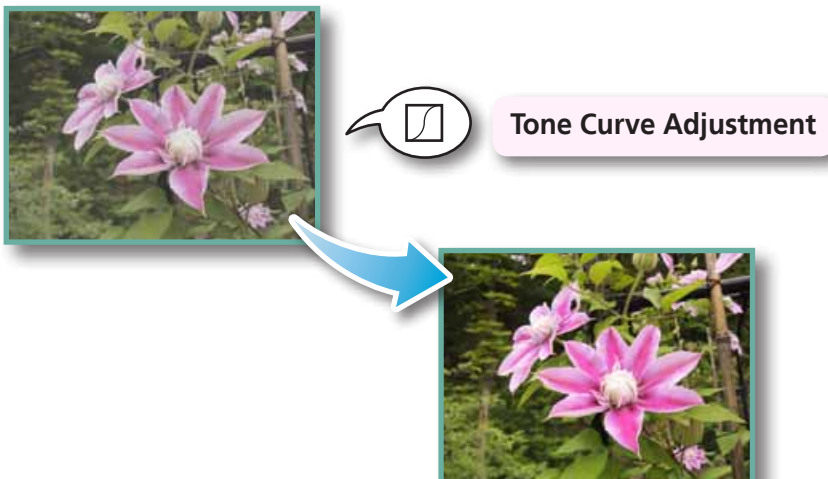


Procedures

- 1 Double-click an image.
- 2  [Edit] and [Tone Curve Adjustment].

- Movies and RAW images cannot be edited.

Adjusting Sharpness – Emphasizing Outlines

Makes images appear sharper by emphasizing the outlines of subjects, such as people and objects.

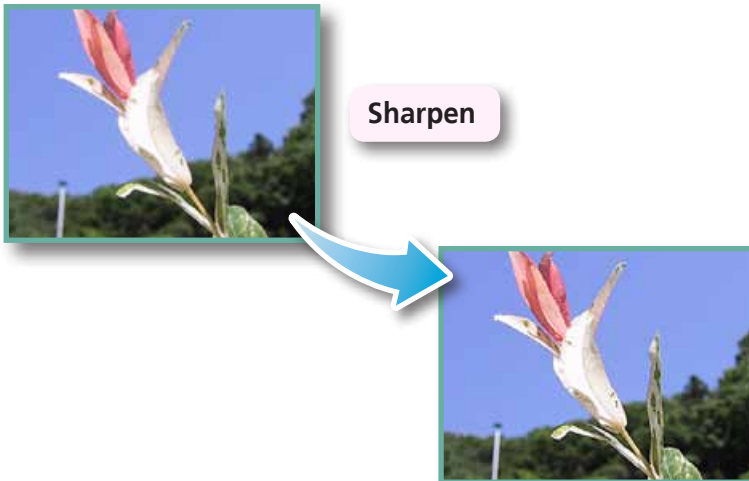 


Procedures

- 1 Double-click an image.
- 2  [Edit] and [Sharpness].


- Movies and RAW images cannot be edited.

Auto Adjustment

 Automatically adjusts the image color balance and brightness.

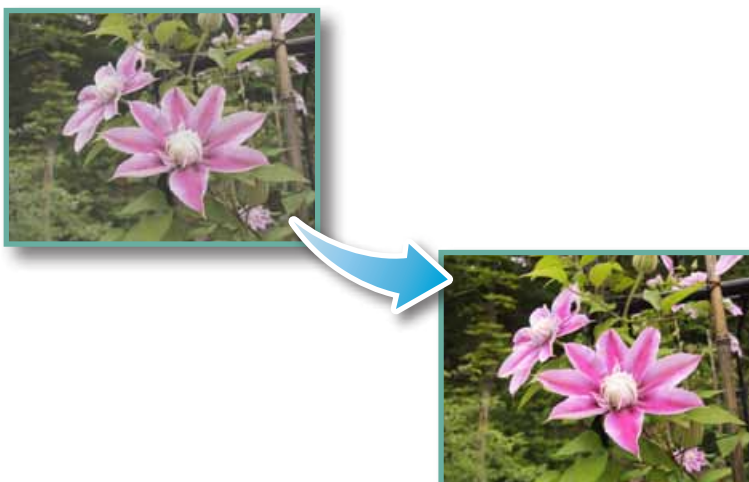

Procedures

- 1 Double-click an image.
- 2  [Edit] and [Auto Adjustment].

- Movies and RAW images cannot be edited.

Using Other Editing Software

If you register another image editing program with ImageBrowser in advance, you can use that software to edit an image selected in ImageBrowser.

Registering an Editing Program

Register the program so it can be started from within ImageBrowser.



ImageBrowser

Other Image Editing Program



Procedures

1



[ImageBrowser] and [Preferences].

2

[Register Application]

Editing Images with a Registered Editing Program



Procedures

1

Double-click an image.

2



 
[Edit] and [Edit with Registered Application].

- The shooting information may be lost from images recorded with the camera and then processed and saved with another image editing program.
- Movies and RAW images cannot be edited.

Attaching Sounds

You can add sound to images and play back the sounds.

Adding Sound

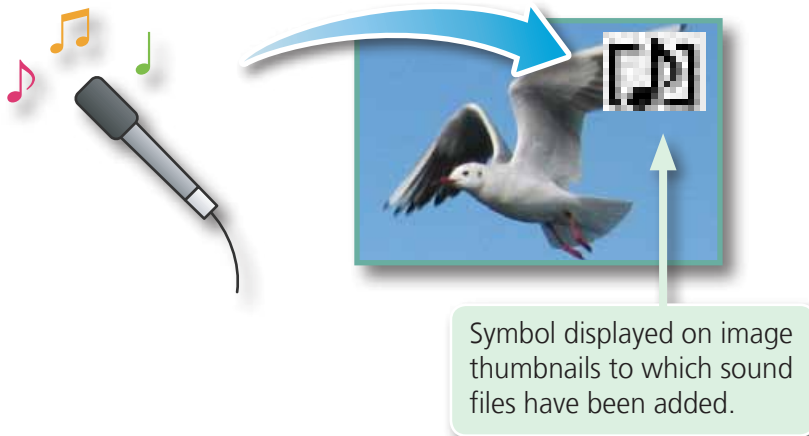

Procedures

1 Select an image.

2 ImageBrowser **File** Edit View Internet

 
[File], [Sound] and [Record].

- ImageBrowser's Sound Recorder uses the Mac OS X recording function. If required, prepare such equipment as a microphone, and check that recording is enabled in the [System Preferences], [Sound] window.
- To delete a recorded sound, click the [File] menu and select [Sound], followed by [Send to Trash].
- To record a new sound for an image that already has one associated with it, click the [File] menu and select [Sound], followed by [Record].

! IMPORTANT

- Sounds cannot be attached to movies.

Playing an Image Sound File

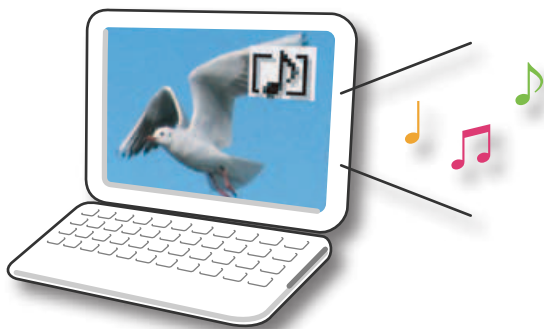

Procedures

1 Select an image.

2 ImageBrowser **File** Edit View Internet

[File], [Sound] and [Play].

- You can also play sounds in the Preview Mode and the File Information Window.

Creating Panoramic Images – PhotoStitch

You can create wide panoramic images by moving the camera slightly when recording a series of images and merging them into one image.



Use the PhotoStitch program to create panoramic images.



Procedures

1 Select the images that you want to stitch together.

2 ImageBrowser File **Edit** View Internet

[Edit] and [PhotoStitch].

- Movies and RAW images cannot be edited.

HINT

Using the Stitch Assist Mode

 
If you use the camera's Stitch Assist mode to record the images, PhotoStitch can automatically detect the image order and merge direction, making it easier to merge the images. (Some camera models may not feature the Stitch Assist mode.)

IMPORTANT

- If a message appears, notifying you that the computer has insufficient memory, try one of the following methods to solve the problem.
 - Close all other applications other than PhotoStitch.
 - Reduce the size or number of images to combine.
 - In the [Save] tab, select [Adjust image...], then in "Saved Image Size" reduce the size.

Editing Movies

You can create original movies by linking movie clips and still images. You can even add titles and other text, background music and various special effects to the movie.

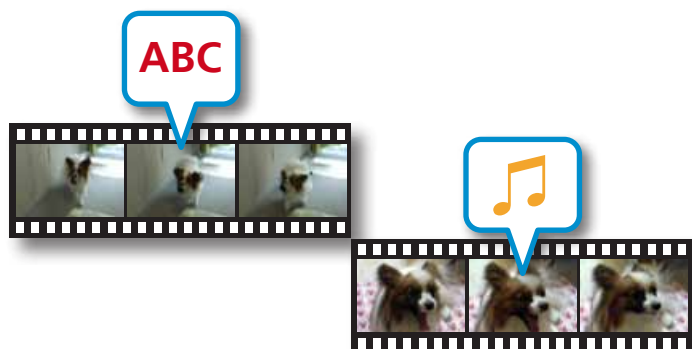

Procedures

1 Select an image (movie or still image).

2



[Edit] and [Movie Edit].

- You can configure the default settings for editing movies by clicking the [MovieEdit Task] menu and selecting [Preferences].

HINT

Recordable Movie Length

- The length of movies you can save is shown at right. A message will appear if you try to save a longer movie. Reduce the length or size of the movie if this happens.

Changing the Playback Speed of a Super Slow Motion Movie and Saving it as a New File

- Click [Slow] in step 1 to change the playback speed (only with Super Slow Motion Movies).

Movie Size	Max. Length
1920x1080	Under 10 minutes
1280x720	Under 20 minutes
640x480	Under 30 minutes
320x240	Under 60 minutes

IMPORTANT

- Movies edited with this function cannot be transferred back to the camera.
- Saving movies takes time, especially MOV type movies selected with [Save image type] takes a considerable amount of time.
- There is a file number limit when editing MOV type movies. To edit and save an MOV movie with a size of 1920 x 1080 at the same size and file type, set the number of files to 20 or less. Likewise, with 1280 x 720 MOV movies, the number of files should be set to 40 or less, and with 640 x 480 MOV movies, 80 or less.

Converting RAW Images – Digital Photo Professional

 
You can convert RAW images to JPEG and TIFF images.

Digital Photo Professional's Main Window



Selects folders containing images.

Digital Photo Professional's Tool Palette

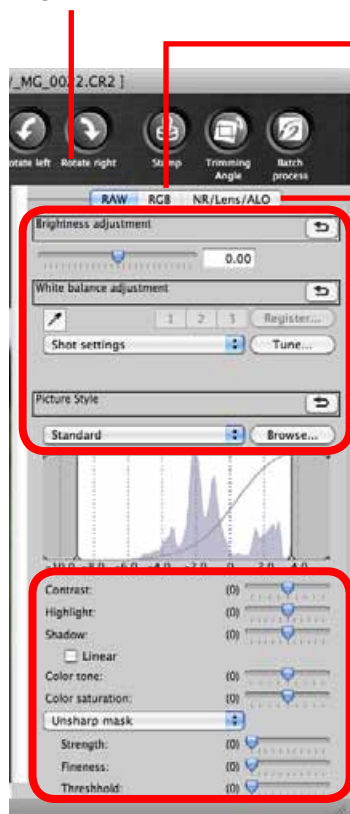

You can adjust all three RGB channel levels together or separately with the Tone Curve.

Reduces noise that occurs when shooting night time scenery, or when shooting at a high ISO speed.

Adjusts the brightness, white balance and picture style.

Adjusts attributes such as the contrast, color tone and color saturation.

Procedures

1 Select a RAW image.



[File] and [Process RAW Images by Digital Photo Professional].

3 Click  (Edit image window).

4 Adjust the image brightness and white balance in the tool palette.

- The modified contents (the information for image processing requirements) are saved along with the image as a "recipe".
- With Digital Photo Professional, you can adjust images to achieve the best results for your desired scene or subject by specifying a picture style.
- The items available to be modified differ depending on the camera model.



[File] and [Convert and save].

- After setting the file type, size, and destination folder, click [Save].

- Only RAW images compatible with Digital Photo Professional can be processed.
- Ensure that you use the RAW image conversion software included with your camera.

To print, using Digital Photo Professional, select an image in the Main Window, then click the [File] menu and select the print function. Digital Photo Professional offers the following printing methods.

Printing Method	Description
Single Print	Automatically sets the layout for printing a single image on a single page.
Detailed Setting	Gives you the freedom to set the layout, add titles, or print with shooting information.
Contact Sheet	Prints a line-up of multiple images on one page (also allows you to select the number of images, layout, and add titles).

 
! IMPORTANT

- RAW images can only be captured on certain camera models that list "RAW" as one of the data types included in the "Specifications" section of the *Camera User Guide*.
- Only RAW images compatible with Digital Photo Professional can be processed. Check the "Data Type" item of the "Specifications" section of the *Camera User Guide* for compatibility.
- For a more detailed explanation of operating procedures, download the Digital Photo Professional manual (PDF format) from the Canon website.

HINT

About RAW Images


RAW images contain the data captured by the camera's image sensor without modification. Since they contain raw data that differs from the usual JPEG images by not having any image adjustment or compression processing performed in the camera, they can be converted on a computer with a lossless process.

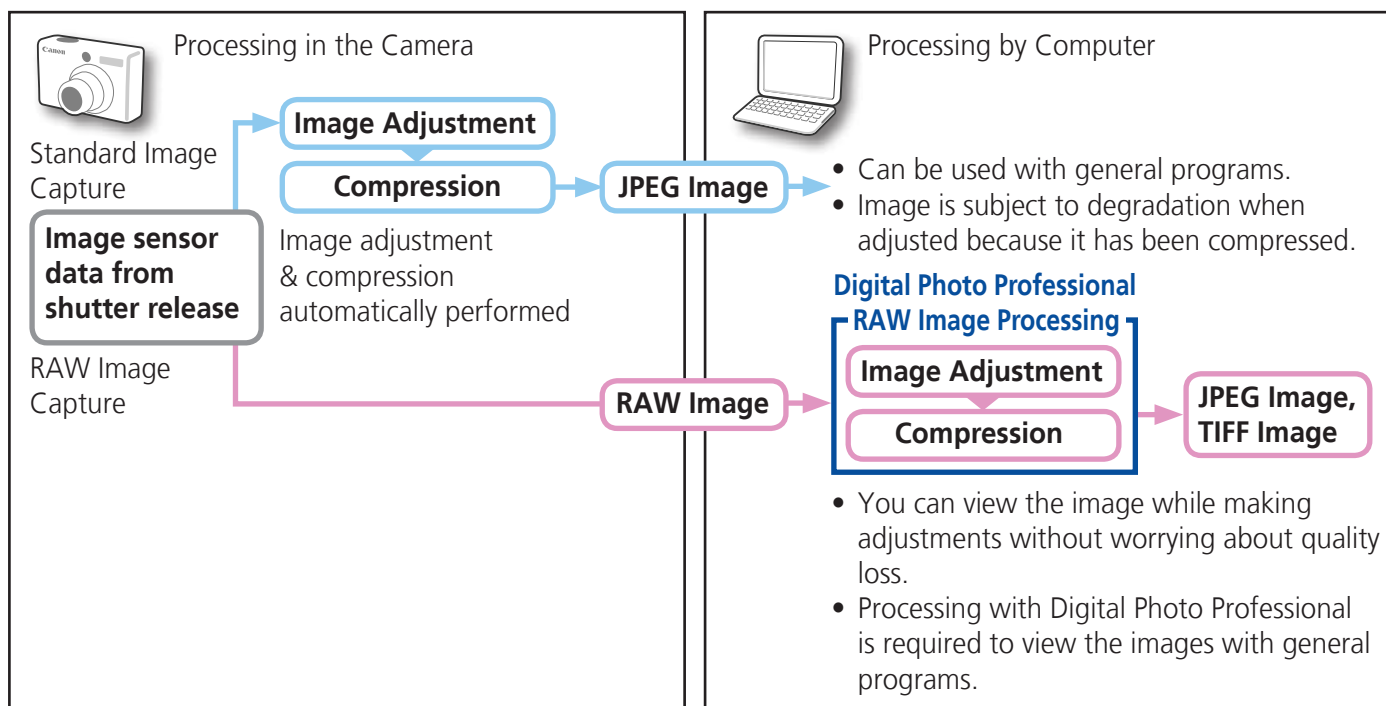

Exporting

Changing Image (Stills) Sizes and Types

 You can change an image's size and format when exporting it so that it can be published on the Internet or attached to an email message.

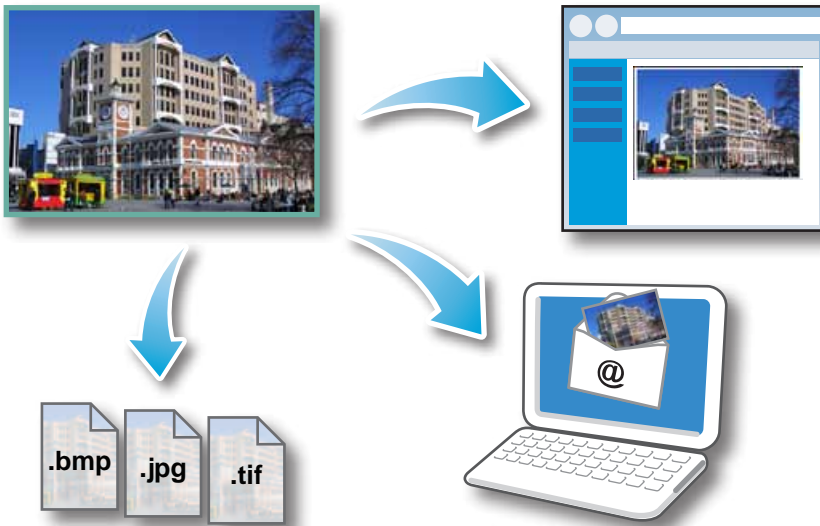

Procedures

1 Select an image.



[File] and [Export Image].

 
3 [Edit and Save Image]

4 [Next >]

- You will lose the shooting information if you save images as a type other than JPEG.

Exporting Shooting Information

You can export the shooting information recorded with an image, such as the shutter speed and exposure, as a text file.

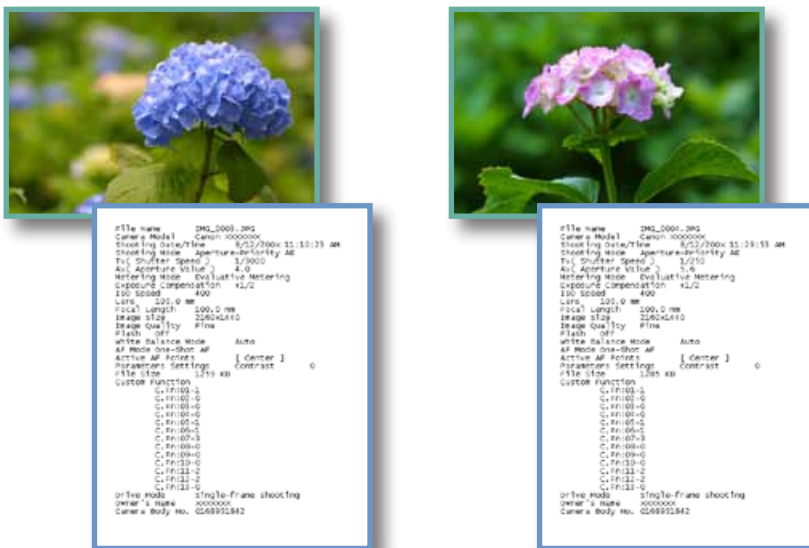

Ascertain the causes of failed photos or compare the settings for several images.

Procedures

1 Select an image.



[File] and [Export Image].

3 [Export Shooting Properties]


4 [Next >]

Creating Computer Screen Saver Images

You can export images to serve as computer screen savers.



Procedures


- 1 Select an image.
- 2  [File] and [Export Image].
- 3 [Export as a Screensaver]
- 4 [Next >]

Creating Computer Wallpaper Images

You can export images to serve as computer wallpaper images.

 


Procedures

- 1 Select an image.
- 2  [File] and [Export Image].
- 3 [Export an Image as Wallpaper]
- 4 [Next >]

Extracting Stills from Movies

You can extract and save stills from your favorite frames recorded in a movie.

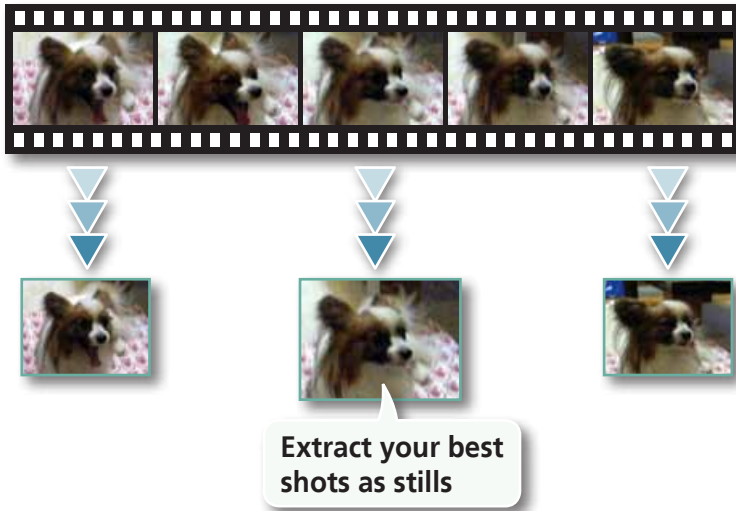

Procedures

1 Select an image.

2 

[Edit] and [Extract frames from a movie].

GPS

Using GPS Information – Map Utility

Using the information from images shot on a camera equipped with an internal GPS function, or information from GPS log files, you can easily view on a map the shooting location, or the route travelled while carrying the camera. You can also add and delete location information.

GPS (Global Positioning System) is a system that uses satellites to determine current location.



Procedures

1 Select an image.



2 [View] and [View on map].

3 Select a display mode.

Route View/Edit Mode


The image selected in ImageBrowser will display.

Input a location to search.

Exports files for use in displaying images with Google Earth. To use these files, it is necessary to install Google Earth. However, images may not display properly depending on the version of Google Earth used.

The currently selected image will display enlarged, in a pop-up window.

The shooting location of images will display as pins on the map.

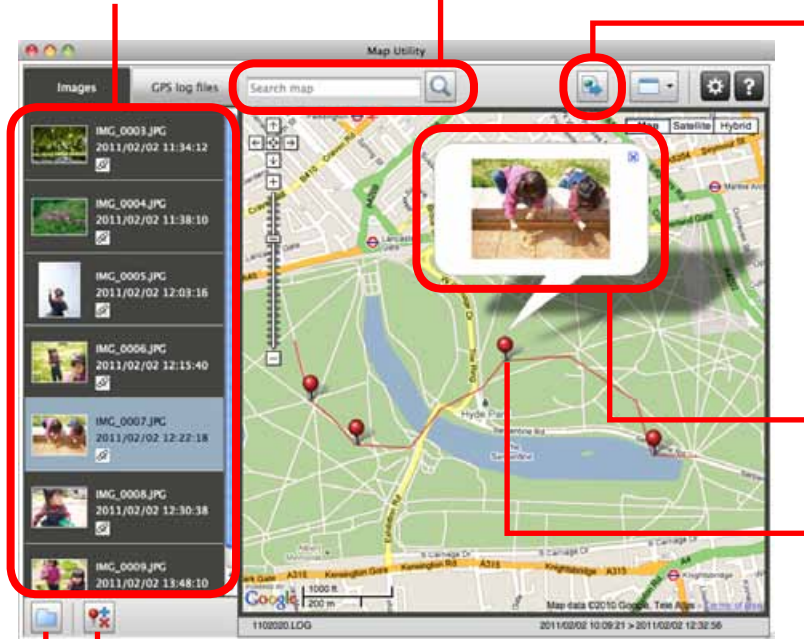 

Adds or deletes an image's location information.

Adds an image.



GPS Log File Manage Mode

Displays GPS log files.

Deletes GPS log file from list.

Changes the time difference information in a GPS log file.

Adds a GPS log file.

Loads a GPS log file from a camera or memory card.

Transfers and displays log information. Use this to adjust the route travelled when it does not display properly.

 
! IMPORTANT

- Internet access is required to use this software (You must already have an account with an Internet service provider (ISP), browser software installed and an Internet connection).
- Any ISP account charges and access fees must be paid separately.
- Google, Google Maps and Google Earth are trademarks of Google Inc.
- Since this software uses Google Maps™ to display images and routes travelled, location information included in images and GPS log files will be uploaded to Google.
- Images shot with the GPS function, and GPS log files both contain information that could be used to determine the user’s physical location. Be sure to take adequate precautions when transferring images and GPS log files to others, or when uploading these files to the internet where they can be viewed by numerous people.
- Only images taken on a camera equipped with an internal GPS function can be displayed.



Uploading Movies to YouTube

Uploading to YouTube – Movie Uploader for YouTube

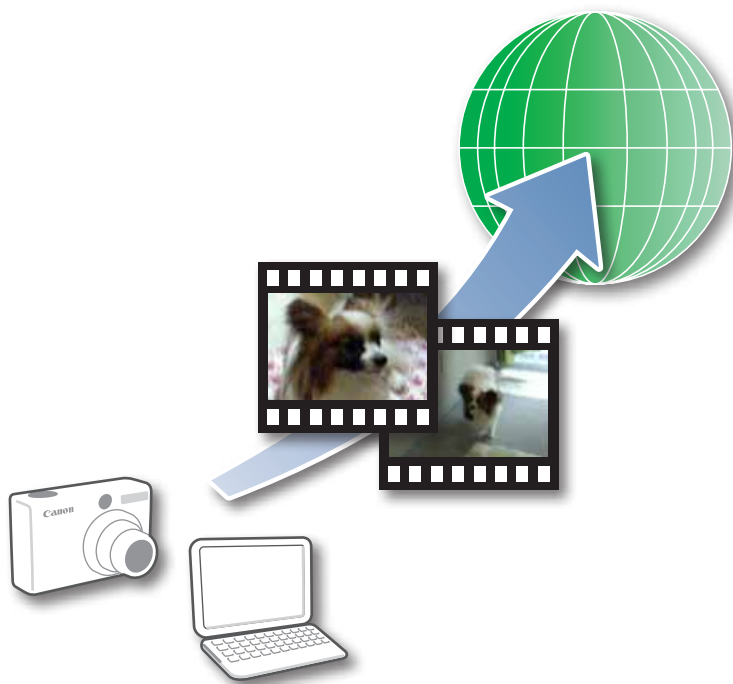You can upload movies you have shot to YouTube. You can upload movies saved on the camera or a computer.



Procedures

- 1 **Connect the camera to a computer to start CameraWindow.**
 - For details, refer to steps 1- 2 in "Transferring Images".
- 2 **[Upload Images from Camera]**
- 3 **[Upload Movies to YouTube]**
- 4 **Select movies.**
- 5 **Click  (Next).**
- 6 **Input a title and description, then click  (Upload).**
- 7 **Enter your YouTube username and password, and sign in.**

HINT

Uploading Movies Saved on a Computer

Select a movie from the Browser Window, then click [Print & Share] in the Control Panel and select [Upload movies to YouTube]. The selected movie will be added to the list that appears on the screen. Set a title and explanation for the movie, then click the  (Upload) button.

IMPORTANT

- Depending on YouTube specifications, or future changes to specifications, this function cannot be guaranteed.
- The maximum length for uploadable movies is less than 10 minutes, and the maximum file size is less than 1 GB.
- In some cases, movies that have been edited on a computer cannot be uploaded.
- Internet access is required to upload movies (You must already have an account with an Internet service provider (ISP), browser software installed and an Internet connection).
- Any ISP account charges and access fees must be paid separately.


Email

Attaching Images to Email

You can send images as email file attachments.



Procedures

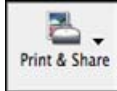- 1 Select images.
- 2  [Print & Share] and [Create Image for Email].

- You can configure how the email program automatically starts up by opening the [Applications] folder, and double-clicking the [Mail] icon to start the Mail program, and clicking the [Mail] menu, followed by [Preferences] and the [General] tab.
- Images in the [Email Images] folder can be found by opening the [Users] folder on the startup disk, followed by the [User Login Name], [Library], [Preferences], [ImageBrowserUserData] and [Mail] folder.

! IMPORTANT

- If the e-mail software does not start automatically, start your e-mail software to attach and send the images.

Slide Shows

Viewing Images in Slide Shows

A multiple selection of images can be shown at full size on the screen in succession as a slide show.

You can freely configure the transition effects, information displayed and display time settings.



Procedures

- 1 Select images.
- 2  [SlideShow]

- You can configure the slide show display method by clicking the [View] menu and selecting [Slide Show Options].

HINT

Slide Show Button Functions

The following buttons appear at the bottom of the screen while a slide show is playing.

You can set the Rating for an image while it is displayed.

Go to first image

Rewind

Pause

Forward

Advance to last frame



After the slide show, the images you clicked during the show remain selected.


After the slide show, the images you clicked during the show appear in a printing window.

Stops the slide show.

Image Management

Changing File Names in Batches

 You can change the file names of multiple images in one procedure.

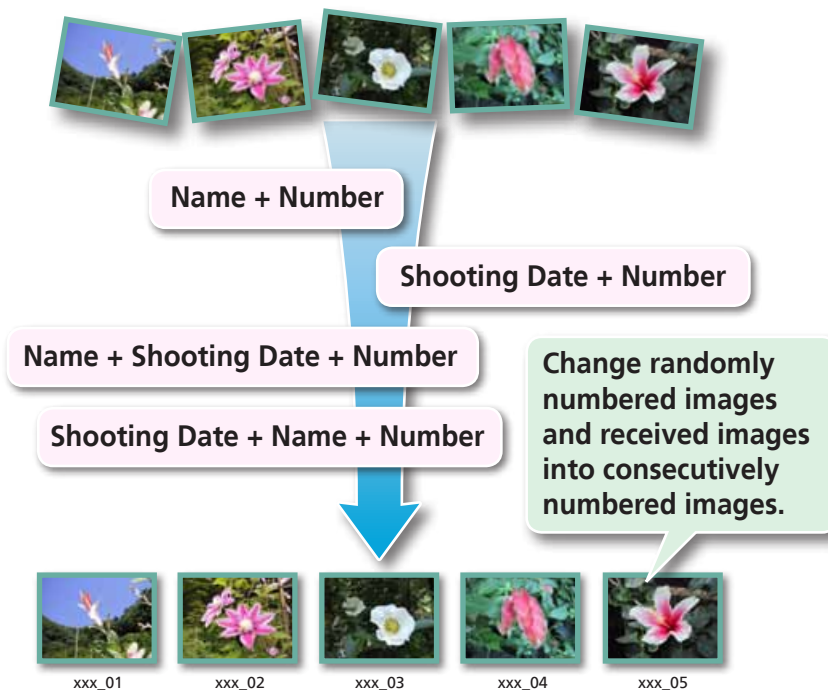

Procedures

1 Select an image.

 
2 ImageBrowser **File** Edit View Internet

[File], [Organize Image] and [Rename].

- You can change individual file and folder names by clicking on the file name in Preview mode or with the File Information Window.
- Changing the image name in ImageBrowser also changes the actual file name on the disk.

Sorting Images into Folders by Shooting Date

You can sort images into folders by their shooting dates.

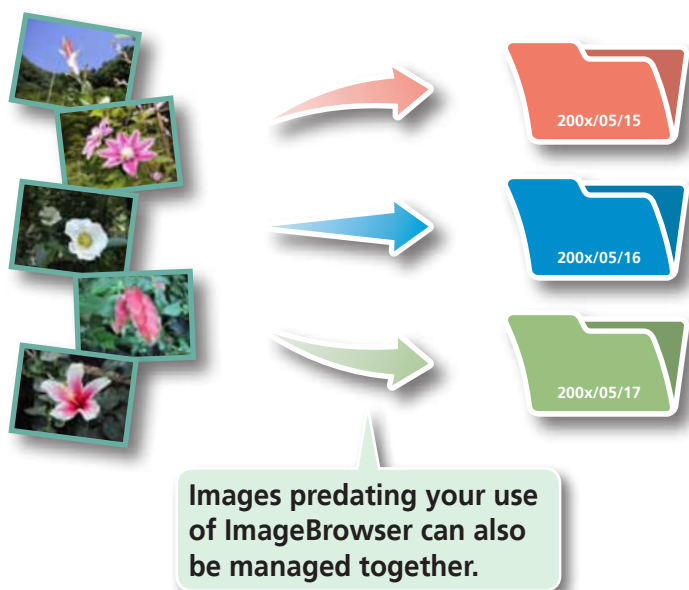

Procedures

1 Select an image.

2 ImageBrowser **File** Edit View Internet

[File], [Organize Image] and [Sort Images].

3 **[The files will be separated into folders for each shooting date.]**

4 **[Next >]**

Sorting Images into Ratings Folders

You can sort images according to their Ratings into separate folders.



Procedures

1 Select an image.

2 ImageBrowser **File** Edit View Internet

[File], [Organize Image] and [Sort Images].

3 [The files will be organized by rating.]

4 [Next >]


Configuring Image Information Settings

Setting Ratings

There are seven rating levels for images: ☆, ☆☆, ☆☆☆, ☆☆☆☆, ☆☆☆☆☆, Unrated and Reject. By using ratings, you can group your images for viewing or searching.



Procedures

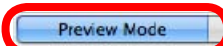- 1 Select an image.
- 2  List Mode
Switch to [Preview Mode].
- 3 Set [Rating].

- Ratings can also be set with the following:
 - ImageBrowser's [Edit] menu or File Information Window, or the rating setting function of the Viewer Window.
 - The camera's [Tag as Favorite] function (excluding movies).
- If you overwrite your previous installation when installing the software, existing rating settings may change. Refer to the Help function for details.

! IMPORTANT


- The only cameras that can be used to rate images will list "Favorites" in the "Playback Menu" table of the "Menus" section at the end of the *Camera User Guide*.

Inserting Comments

You can freely insert your choice of text as Comments.



 
Procedures

- 1 Select an image.
- 2  List Mode
Switch to [Preview Mode].
- 3 Insert [Comment].


- Comments can also be managed in the File Information Window.

Assigning Keywords

You can set Keywords for use in image searches.

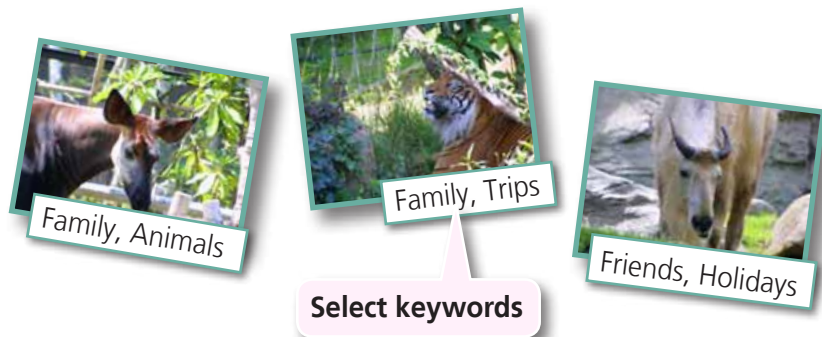

Procedures

- 1 Select an image.
- 2  Switch to [Preview Mode].
- 3 Set [Keyword].

- Keywords can also be managed from the [Edit] menu or File Information Window.
- To add keywords, click the [Edit] menu and select [Manage] from the [Keyword] submenu.

HINT

About Image Information

This chart shows the information other than shooting information that can be added to images.


Information Type	My Category	Ratings	Comments	Keywords
Content	Categories such as People, Scenery, etc.	Favorite images are rated by adding stars (★).	Text input without restriction regarding the shooting circumstances or associated memories.	Selections are made from a list (editable) of keywords, such as the photographic subject, place or action.
Configuration Method	Camera	ImageBrowser, Digital Photo Professional, Camera (Favorite)	ImageBrowser	
Used in Searches	—	○	○	○
Used as Filter Criteria	○	○	—	—
Display beneath Thumbnail	○	○	○	—

Categories displayed beneath thumbnails can be selected from the [View] menu and [View Settings] submenu.

Searching, Filtering and Sorting Images

Searching Images

 You can search images using parameters extracted from the information associated with them.

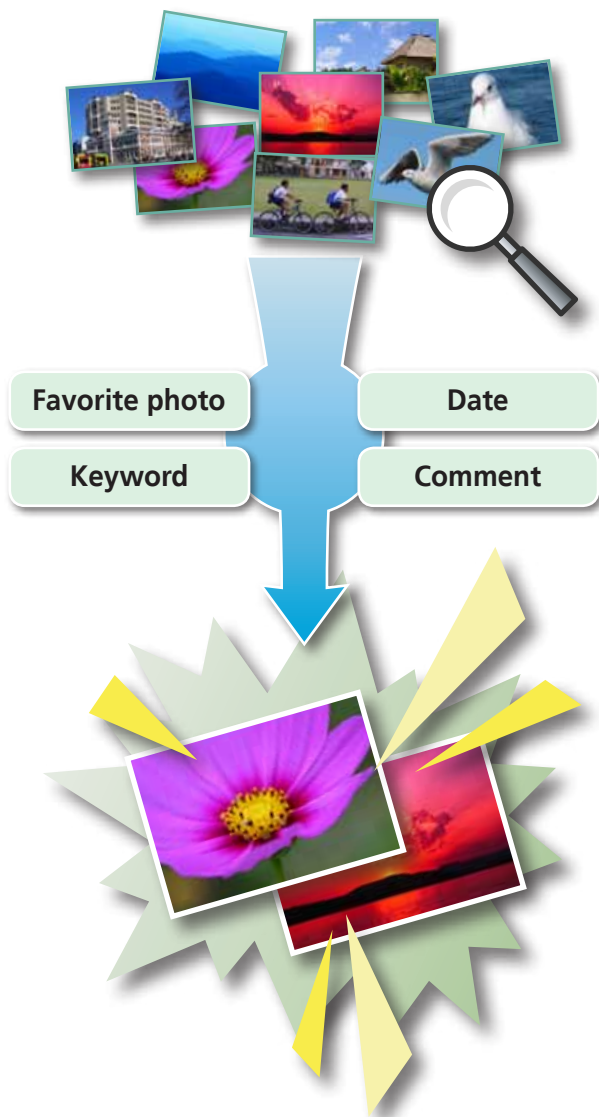


Procedures

7

ImageBrowser File Edit View Internet

[File] and [Search].

 - After a search, the correlated images display in the [Search Results] folder.

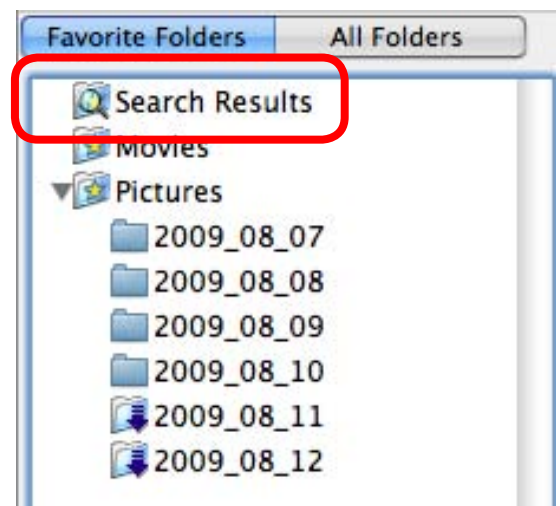

HINT

Tasks Related to Search Results

You can select images in the [Search Results] folder and perform operations on them, such as printing or copying them to other folders.

IMPORTANT

- Please note that deleting an image from the [Search Results] folder deletes the original image. Use caution in deleting items from this folder.



Filtering Images

 
You can use filters to display only images meeting the selected parameters in the Browser Area.



Procedures


- 1 Filter Tool
[Filter Tool]

This section is used to specify the filter criteria.

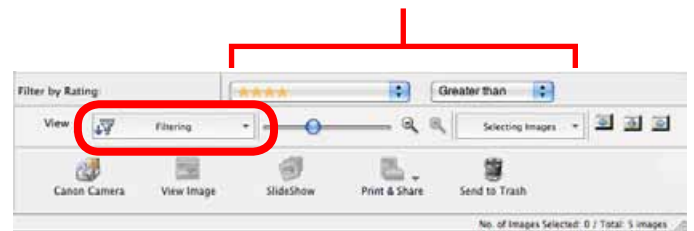

Sorting Images

 You can sort images in the Browser Area based on the specified parameters.

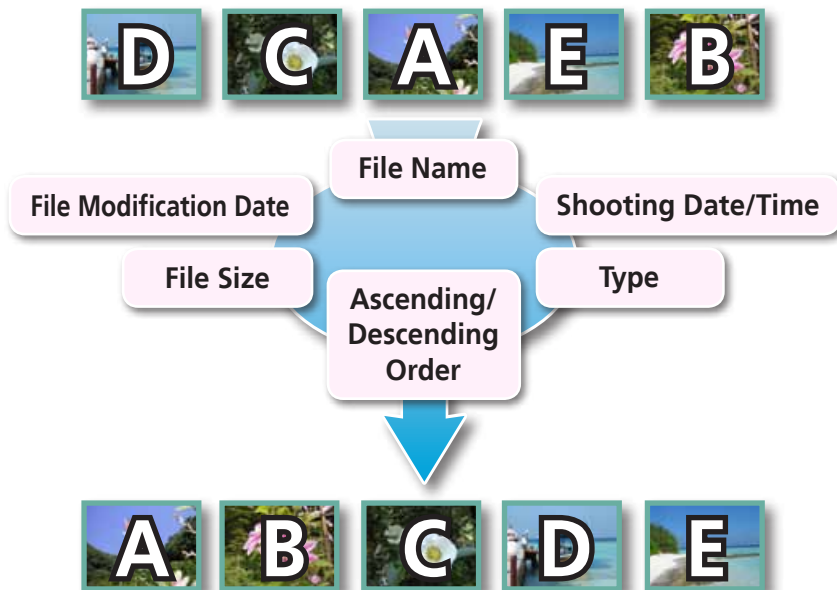



Procedures

- 1 ImageBrowser File Edit **View** Internet
[View] and [Sort].

Comparing Images

Comparing Multiple Images

  When a good photo opportunity arises, you can shoot the same subject using different shutter speeds and exposures. In ImageBrowser, it is easy to compare images so that minute differences can be detected.

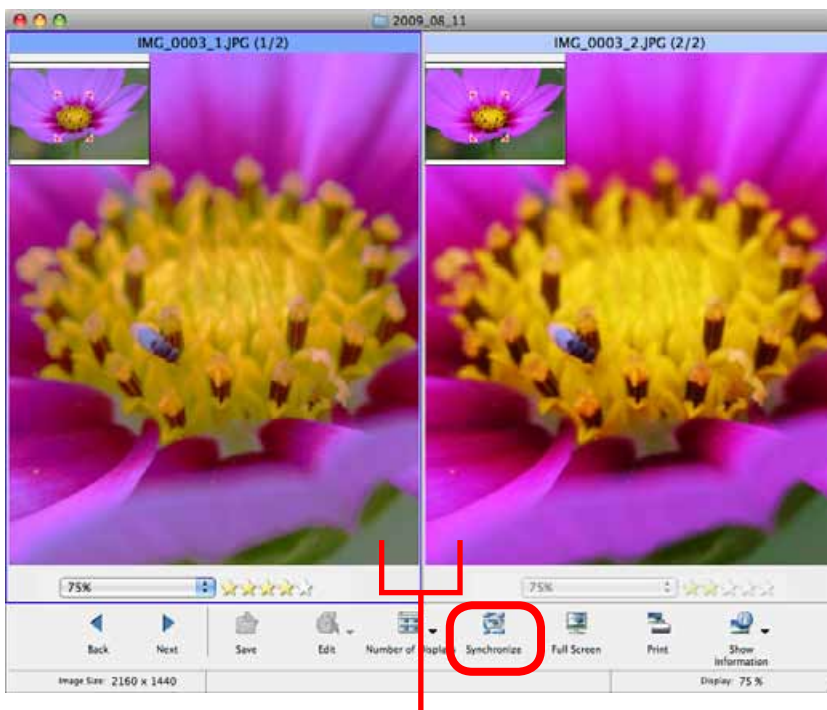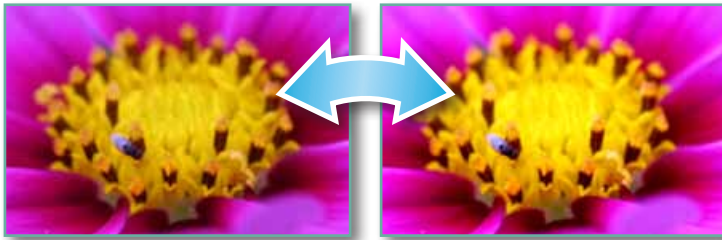


Actions performed on an image, such as scrolling or changing the magnification, are performed on the other image as well.

Procedures

1 Select several images to compare.

2  [View Image]

3  Select a view method from [Number of Displays].

 
4  [Synchronize]

- Selecting [Synchronize] causes actions such as increasing/reducing the magnification level or scrolling around the image to apply to all of the selected images in lock step, making it easy to check minute details of focus, coloring and other image characteristics.

My Camera Settings

Changing the Shutter Sound and Start-Up Image

You can select from dedicated screens to register to the start-up screen that appears when turning the camera on, and dedicated sounds to register to various camera operation sounds (My Camera Settings).

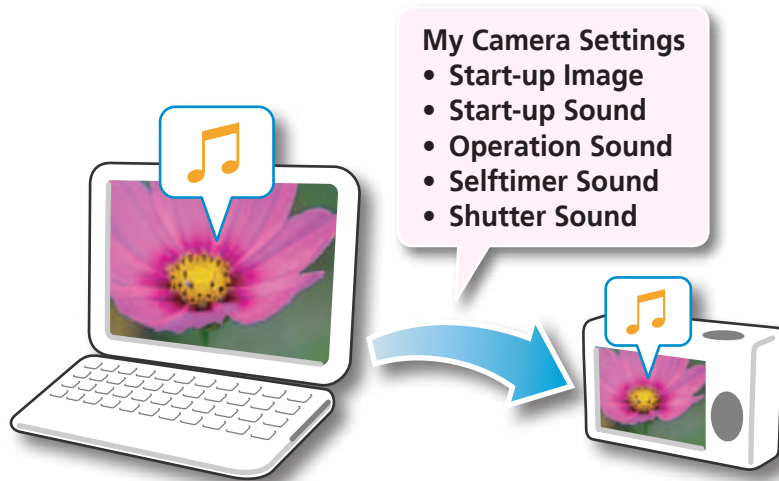


Procedures

1 Connect the camera to a computer to start CameraWindow.

- For details, refer to steps 1- 2 in "Transferring Images".

 2 [Camera Settings]

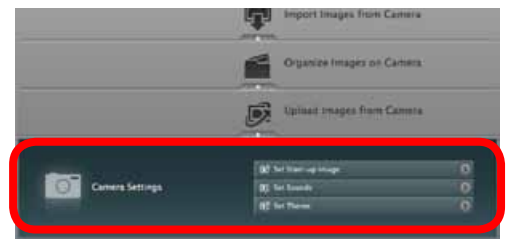

Select the desired item from the following and make settings.

- ▶ [Set Start-up Image]
- ▶ [Set Sounds]
- ▶ [Set Theme]

 
! IMPORTANT

- My Camera Settings are only available on certain models, when [Camera Settings] displays in CameraWindow.

My Camera Settings registered in the camera.

My Camera Settings

You can register the start-up image, start-up sound, shutter sound, operation sound and self-timer sound collectively if you select [Theme].

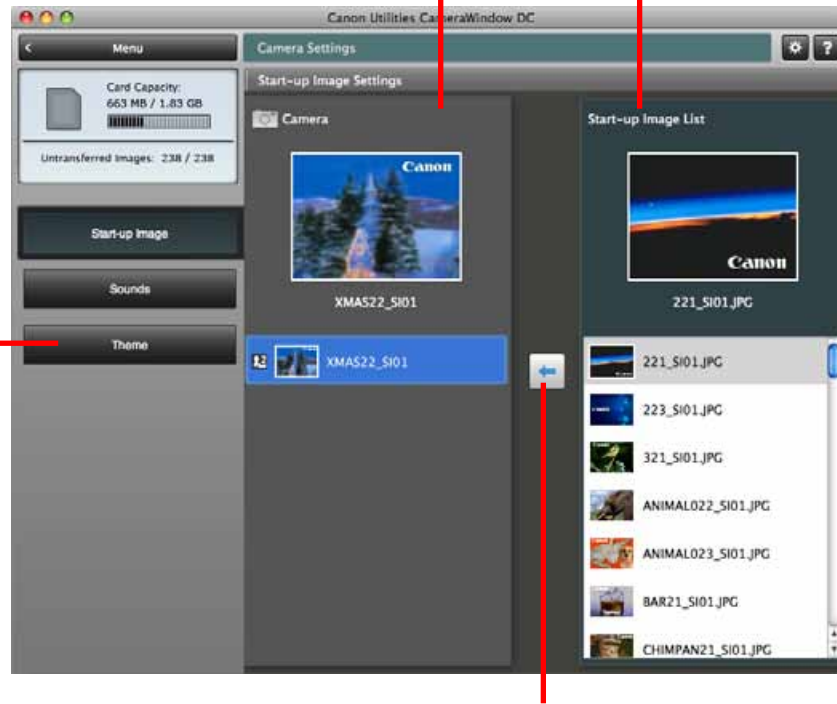

Select a My Camera Settings file to replace in the right-hand list and click this button to register it in the camera. If multiple My Camera Settings files are displayed in the left-hand list, choose the file you want to replace first, then register it in the camera.

HINT

Downloading My Camera Settings Files

You can also download various files to use in My Camera Settings from CANON iMAGE GATEWAY.

Transferring Images

Transferring Images to a Camera

Images transferred once to a computer can be transferred back to the camera.



Procedures

1 Connect the camera to a computer to start CameraWindow.

- For details, refer to steps 1- 2 in ["Transferring Images"](#).

2 [Organize Images on Camera]

3 [Organize Images]

4  (Upload)

5 Select images.

- If ImageBrowser's Browser Window is open when the camera is connected (directly after transferring for instance), open the CameraWindow (menu screen) by clicking the [CameraWindow] icon in the Dock (the bar at the bottom of the desktop).

! IMPORTANT

- Cameras that use the "MOV" data type can play back movies transferred back to the camera if movies were taken with that camera. Refer to the "Data Type" item in "Specifications" near the end of the *Camera User Guide* to see if the camera uses the "MOV" data type. You may not be able to play back movies taken with another camera.
- Only still images compliant with Design rule for Camera File system standards can be transferred to your camera's memory card.
- You may not be able to transfer images back to the camera if they have been edited on a computer, or if the image information has been modified.

CANON iMAGE GATEWAY

About CANON iMAGE GATEWAY (for U.S.A. customers only)

CANON iMAGE GATEWAY is an online photo service for the purchasers of this product. Registering online allows you to use the various services.

! IMPORTANT

- Internet access is required to use CANON iMAGE GATEWAY (You must already have an account with an Internet service provider (ISP), browser software installed and an Internet connection).
- See the homepage for information regarding browser versions (Safari, etc.) and settings to best connect to CANON iMAGE GATEWAY online photo services.
- Any ISP account charges and access fees must be paid separately.

Registering

First, register as a CANON iMAGE GATEWAY member.

Register



CANON
iMAGE
GATEWAY



 
Procedures

1




[CANON iMAGE GATEWAY] and [Register/Add Product].

- You can register online using the supplied CD-ROM. To do this, in the installer panel, click [Register] underneath CANON iMAGE GATEWAY.

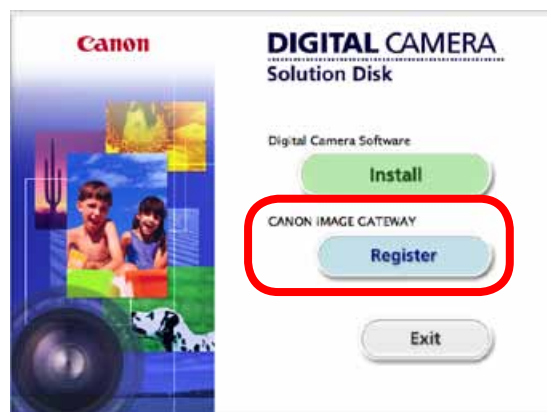

Available Services

CANON iMAGE GATEWAY offers a variety of convenient and useful services.

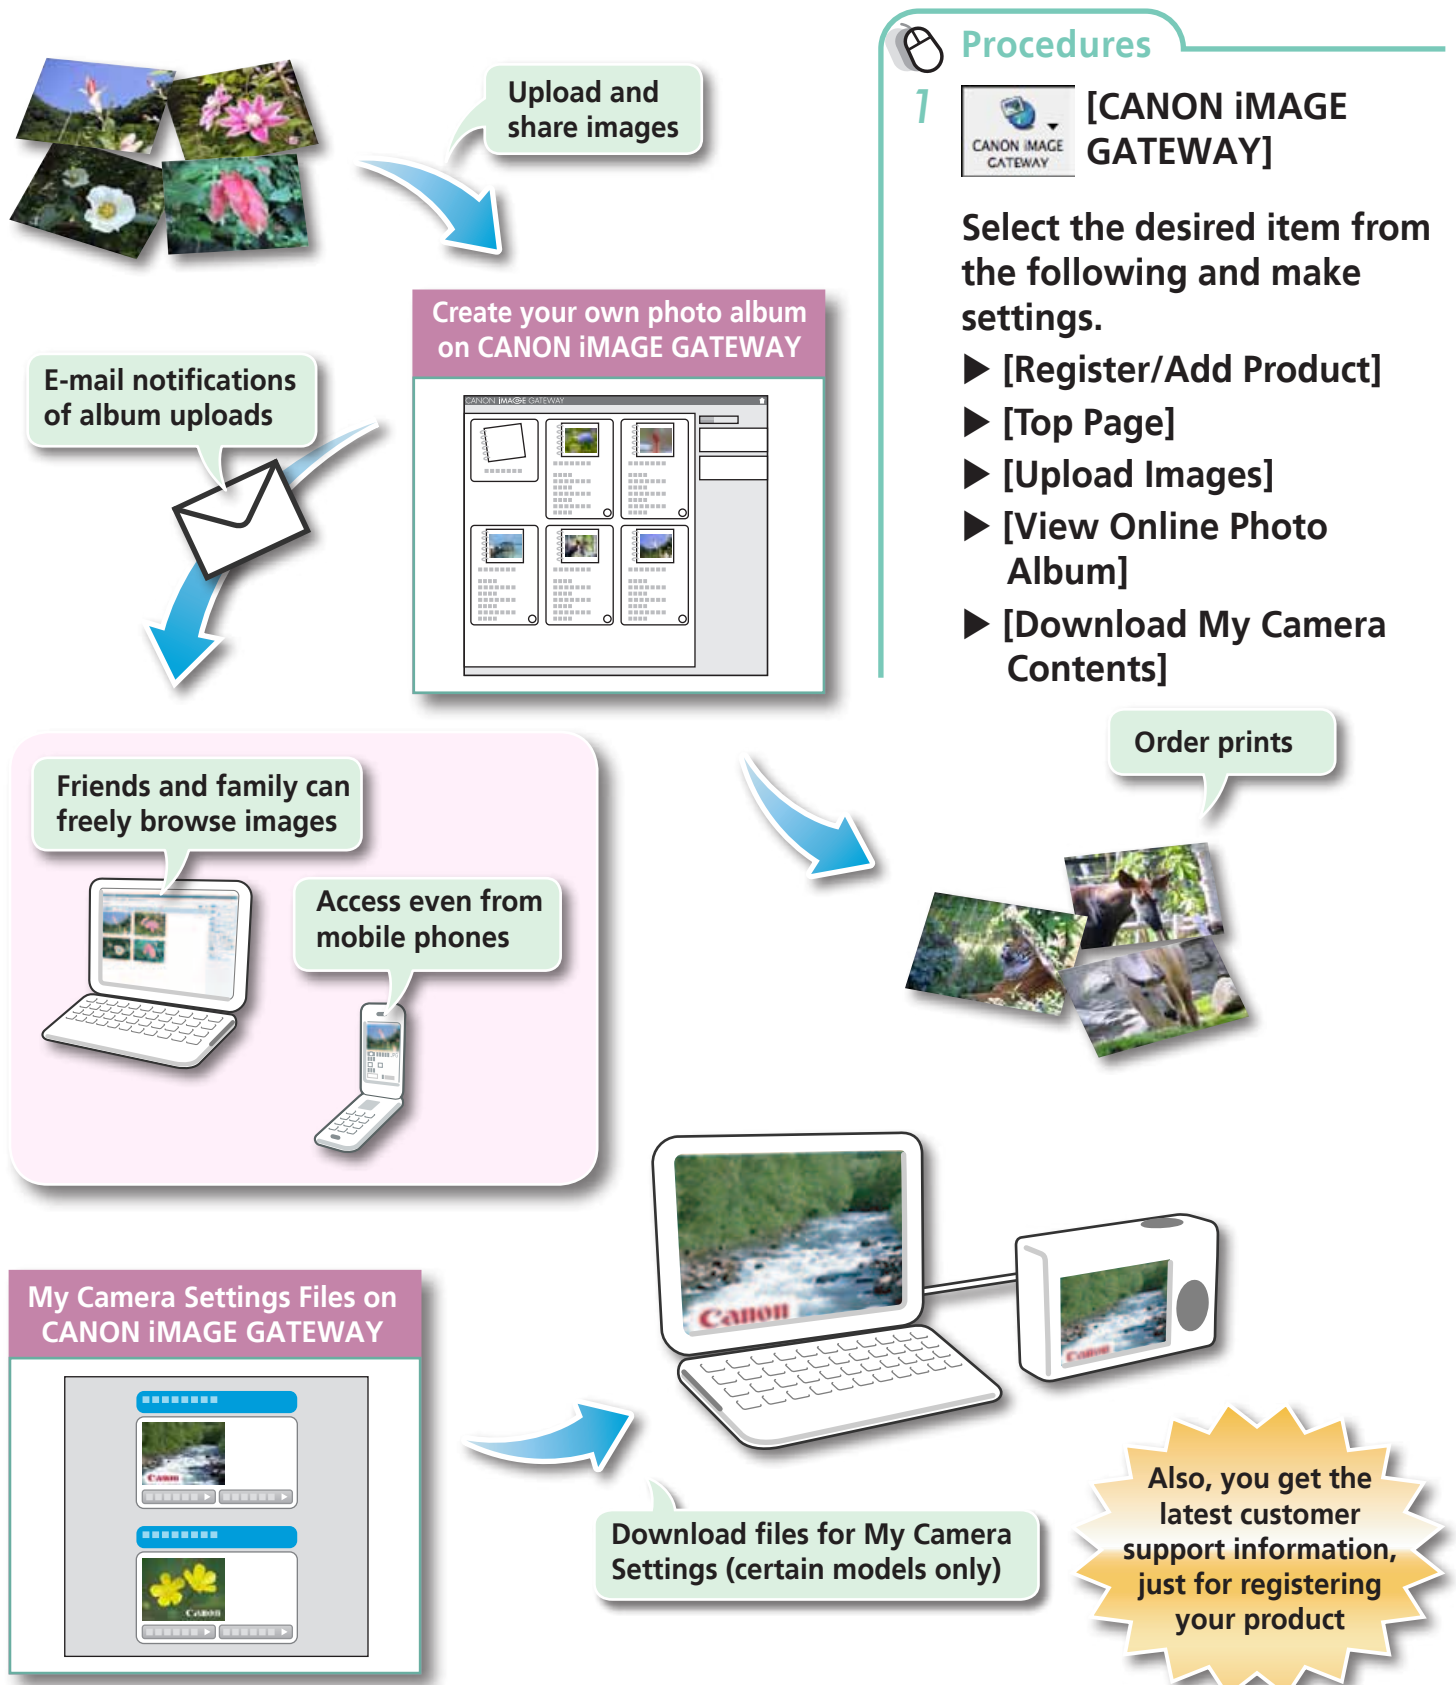 

Procedures

1



[CANON iMAGE GATEWAY]

Select the desired item from the following and make settings.

- ▶ [Register/Add Product]
- ▶ [Top Page]
- ▶ [Upload Images]
- ▶ [View Online Photo Album]
- ▶ [Download My Camera Contents]

 
Friends and family can freely browse images



Access even from mobile phones



My Camera Settings Files on CANON iMAGE GATEWAY

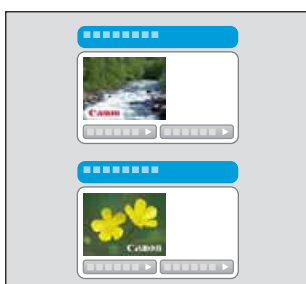

Download files for My Camera Settings (certain models only)

 
Also, you get the latest customer support information, just for registering your product



Preference Settings

Customizing ImageBrowser

You can configure ImageBrowser and CameraWindow to your preferences.

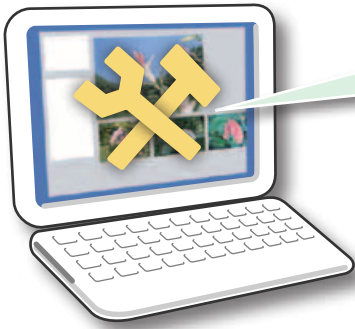

- Overall coloring, such as window appearances
- Processing methods for images shot with the camera on end
- Categories of shooting information displayed
- Show/hide messages
- Print settings
- Registering applications




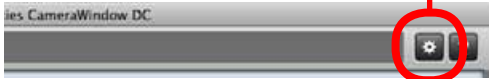
Procedures

ImageBrowser

1 

[ImageBrowser] and [Preferences].

CameraWindow

1 Click  (Preferences). 

List of Available Functions

CameraWindow Functions

Function Names		Description of Function
Import Images from Camera	Import Untransferred Images	Only transfers images from the camera that have not yet been transferred.
	Select Images to Import	Only transfers chosen images from the camera.
	Import All Images	Transfers all images from the camera.
Organize Images on Camera	Organize Images	Protect, rotate, and delete images on the camera. Also transfers images back to the camera from your computer.
Upload Images from Camera	Upload Movies to YouTube	Uploads movies on the camera to YouTube.
Camera Settings	Set Start-up Image	Sets the camera start-up screen.
	Set Sounds	Sets camera sound effects (start-up sound, shutter sound, operation sounds, self-timer sound).
	Set Theme	Sets the camera start-up screen and sound effects in My Camera Settings.
Preferences	General (General/Connected Camera)	Sets the camera owner name, and start-up screen when CameraWindow starts.
	Import (Auto Import/Folder Settings/After Import)	Sets the automatic transfer settings and destination folder.

ImageBrowser Functions

Control Panel Functions

Function Names		Description of Function
Canon Camera	When a Camera is Connected	Connects to the camera to open CameraWindow (menu screen), and use CameraWindow functions.
	When a Memory Card Reader is Connected	Transfers images from a memory card. You can also select images on the memory card and print them.
View Image		Displays the selected image or movie in the Viewer Window.
SlideShow		Starts a slide show of the selected images. Click the [View] menu and select [Slide Show Options] to set the slide show settings.
CANON iMAGE GATEWAY	Register/Add Product	Connects to CANON iMAGE GATEWAY and opens the registration page.
	Top Page	Connects to CANON iMAGE GATEWAY and goes to the top of the page.
	Upload Images	Connects to CANON iMAGE GATEWAY and uploads images.
	View Online Photo Album	Connects to CANON iMAGE GATEWAY and displays albums created.
	Download My Camera Contents	Connects to CANON iMAGE GATEWAY and downloads images and sounds for use with My Camera Settings.

Function Names		Description of Function
Print & Share	Photo Print	Prints one image per page. You can print "photos" easily.
	Index Print	Lines up small versions of the images in rows and prints.
	Layout Print	Allows you to freely arrange multiple images on a single page and print. You can also insert captions and titles.
	Create Image for Email	Converts the selected images to the appropriate size for transmission by e-mail. You can also use it to automatically start an e-mail program after conversion.
	Upload movies to YouTube	Uploads movies saved on the computer to YouTube.
Send to Trash		Sends the selected images or folders to the Trash.

Functions Selected from Menus

Function Names	Menu	Description of Function
Search Images	[File] menu, [Search]	Searches for images based on such criteria as Ratings, dates, keywords or comments.
Export Images	[File] menu, [Export Image]	
	Edit and Save Image	Allows you to change the file type or size and export the file.
	Export Shooting Properties	Allows you to export the shooting properties as a text file.
	Export as a Screensaver	Exports the image as a screen saver file.
Organize Images	[File] menu, [Organize Image], [Sort Images]	Sorts images according to criteria such as the shooting date or Rating and saves them into a specified folder.
	[File] menu, [Organize Image], [Rename]	Changes the files names of multiple images in a single pass.
Convert RAW Images	[File] menu, [Process RAW Images by Digital Photo Professional]	Converts RAW images into JPEG or TIFF images. You can adjust the image brightness, contrast and color balance among other attributes during conversion.
Writing to Memory Card	[File] menu, [Rewrite Image to Memory Card]	Transfers images from the computer to the memory card.
Merge Panoramas	[Edit] menu, [PhotoStitch]	Merges multiple images and creates a single large panoramic image .
Edit Movie	[Edit] menu, [Movie Edit]	Edits movies or still images strung together. You can add text as titles, or background music, and apply various effects.
Extract frames from a movie	[Edit] menu, [Extract frames from a movie]	Extracts still images from movies over a specified interval and saves them as image files.
Display Settings	[View] menu, [View Settings]	Hides or shows image information beneath the thumbnail, such as the file name or the shooting date and time.
Sort Images	[View] menu, [Sort]	Arranges image order in the Browser Area according to criteria such as the filename, file modification date, file size or shooting date.
View on map	[View] menu, [View on map]	Uses an image's GPS information to display the shooting location or image on a map.

Supported Image Types

The following is a list of image types supported by ImageBrowser.

JPEG

Most cameras use this image type. It compresses at very high ratios, taking advantage of the characteristics of the human eye. However, because it is an irreversible compression method (part of the data is lost during compression), if you process and save an image repeatedly using this method, the image may become rougher.

Exif JPEG is an image type that adds information such as shooting data to a JPEG image.

RAW

This is a proprietary image type provided by Canon. It allows the output of the image pixels from a digital camera without any deterioration in the quality of the image. Some cameras might not support this image type.

PICT

This is the standard image type for Macintosh. This image type is supported by most Macintosh software.

TIFF

This is a relatively popular image type. It is widely supported by non-Macintosh programs (such as Windows).

BMP (Windows Bitmap)

This image type comes standard with Windows. Most Windows programs support it.

AVI (.AVI)

Standard Windows movie type. The movie icon appears in ImageBrowser's Browser Area.

MOV (.MOV)

Movie type. The movie icon appears in ImageBrowser's Browser Area.

Uninstalling the Software

The procedures for uninstalling the software are only required when you wish to delete the programs from your computer or when reinstallation is required to fix corrupted files.

IMPORTANT

 
- Computer administrator status is required to perform the following operation.
- Please be careful not to accidentally delete any folders with downloaded images that may be contained within the application folder.

1 Move all of the application folders from the installation destination folder to the trash.

2 Empty the trash.

Memory Card Folder Structure

Images on the memory card are in either the [DCIM] folder's [xxx__mm] folder, or the [xxx_mmdd] folder (xxx: numbers 100 to 999, mm: shooting month, dd: shooting day).

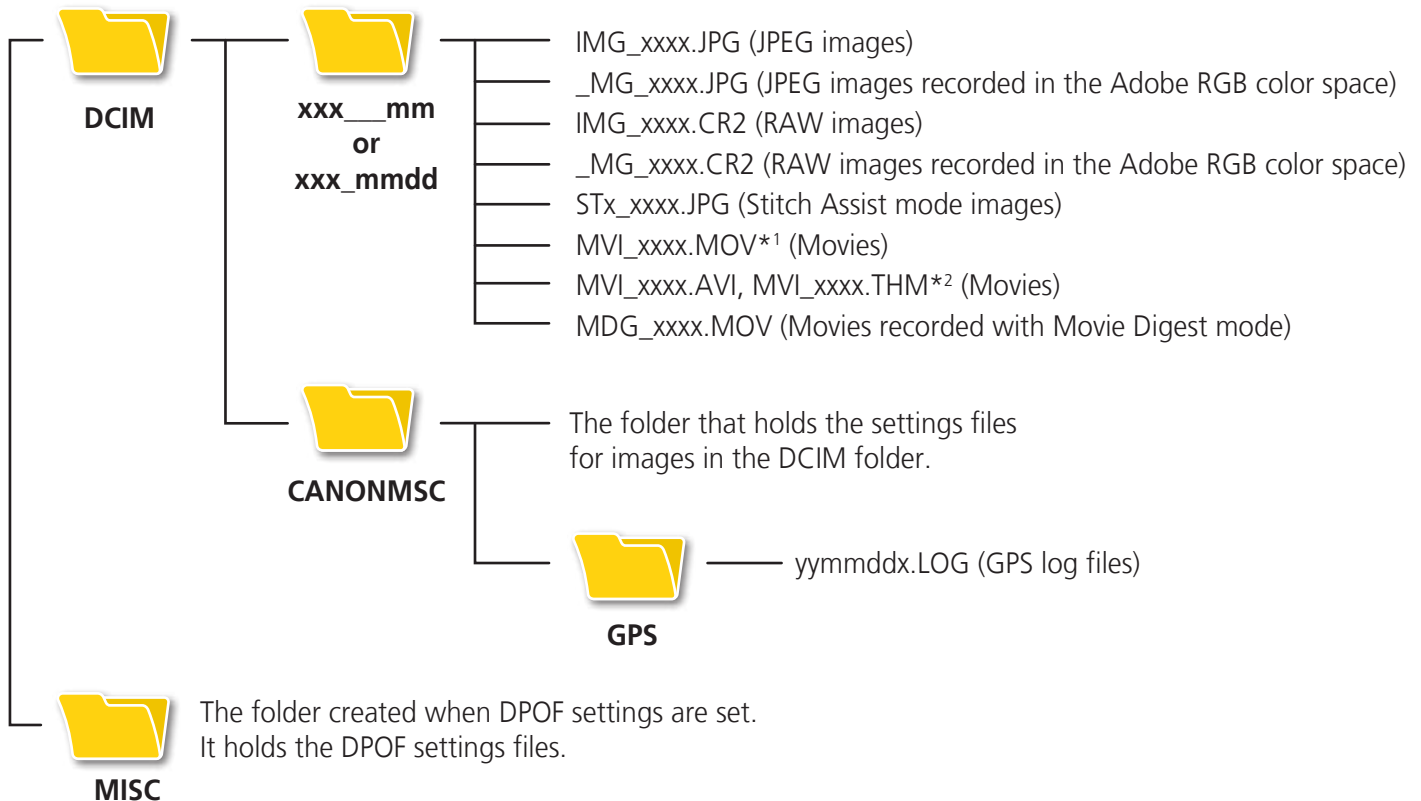

- *1 Some camera models create thumbnail image files for index display (MVI_####.THM). If you delete these files, you will be unable to transfer movies to the camera from a computer.
- *2 Thumbnail image files for index display.
- The “xxxx” in file names represent four-digit numbers.
- Each successive file shot in Stitch Assist mode is assigned a letter starting from “A,” which is inserted as the third digit in the name. i.e. [STA_0001.JPG], [STB_0002.JPG], [STC_0003.JPG]...
- “yy” in the GPS log file names (in the [GPS] folder) represent the last two digits of the year.
- All folders except the “xxx__mm” or “xxx_mmdd” folders contain image settings files. Do not open or delete them.
- Depending on the camera, some data types cannot be recorded.

Troubleshooting

Please read this section if you encounter a problem using the software.

Start by Checking This

Investigate the following points first if you encounter a problem.

Does your computer satisfy the requirements listed in the System Requirements section?

See “System Requirements” in the *Camera User Guide*.

Is the camera correctly connected to the computer?

See the *Camera User Guide* for the correct connection procedures. Also check to ensure that you are using the correct cable and that it is securely attached at both ends.

Are the camera and computer in the correct modes to transfer data?

Some models require the camera to be set to the playback mode to transfer data. See the *Camera User Guide* for details.

Is the battery sufficiently charged?

Check the battery charge if you are powering the camera with a battery. You are recommended to use an AC adapter (sold separately) to power the camera when it is connected to a computer.

Problems

You can't find transferred images.

Refer to [“Changing the Transfer Destination Folder”](#) to confirm where the destination folder is.

Software Guide Macintosh

Disclaimer

- Reprinting, transmitting, or storing in a retrieval system any part of this guide without the permission of Canon is prohibited.
- Canon reserves the right to change the contents of this guide at any time without prior notice.
- Illustrations and screenshots in this guide may differ slightly from the actual products.
- The above items notwithstanding, Canon accepts no liability for damages due to mistaken operation of the products.

